


SHINDAIWA OWNER'S/OPERATOR'S MANUAL

C2510 BRUSHCUTTER

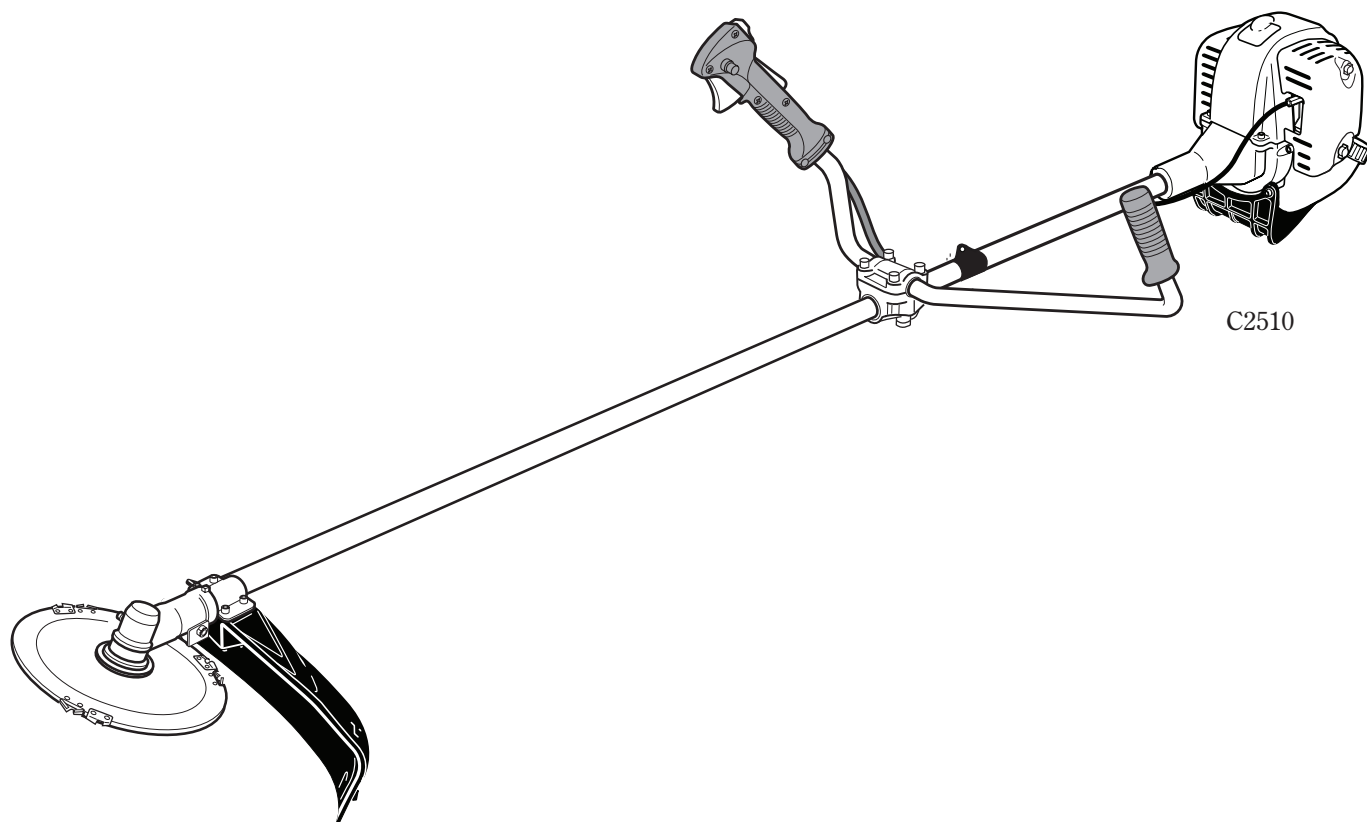

WARNING!

Minimize the risk of injury to yourself and others! Read this manual and familiarize yourself with the contents. Always wear eye and hearing protection when operating this unit.

shindaiwa

Part Number 81704 Rev 2/07

Introduction


The Shindaiwa 2510 Series hand held power equipment has been designed and built to deliver superior performance and reliability without compromise to quality, comfort, safety or durability.

Shindaiwa engines represent the leading edge of high-performance engine technology, delivering exceptionally high power with remarkably low displacement and weight. As an owner/operator, you'll soon discover for yourself why Shindaiwa is simply in a class by itself!

IMPORTANT!

The information contained in this owner's/operator's manual describes units available at the time of publication.

Shindaiwa Inc. reserves the right to make changes to products without prior notice, and without obligation to make alterations to units previously manufactured.

**WARNING!**


The engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects or other reproductive harm.

Contents

	PAGE
Attention Statements.....	2
Safety Information.....	2
Safety Labels.....	4
Product Description.....	5
Specifications.....	5
Assembly.....	6
Adjustments.....	7
Engine Fuel.....	10
Starting the Engine.....	10
Stopping the Engine	11
Adjusting Engine Idle	11
Checking Unit Condition.....	12
Shoulder Strap.....	12
Cutting Grass with a Trimmer Head	12
Using a Blade.....	13
Maintenance	14
Blade Sharpening.....	17
Long Term Storage.....	17
Troubleshooting Guide	18
Emission System Warranty.....	20

Attention Statements

Throughout this manual are special “attention statements”.

**WARNING!**

A statement preceded by the triangular attention symbol and the word “WARNING” contains information that should be acted upon to prevent serious bodily injury.

CAUTION!


A statement preceded by the word “CAUTION” contains information that should be acted upon to prevent mechanical damage.


IMPORTANT!


A statement preceded by the word “IMPORTANT” is one that possesses special significance.


NOTE:


A statement preceded by the word “NOTE” contains information that is handy to know and may make your job easier.


- 


Read and follow this operators manual. Failure to do so could result in serious injury.
- 

Wear eye and hearing protection at all times during the operation of this unit.
- 

Keep bystanders at least 50 feet (15 m) away during operation.
- 

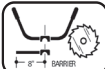Beware of thrown or ricocheted objects.
- 

Do not operate this unit with a blade unless the unit is equipped with a Shindaiwa-approved handlebar or barrier.
- 

Always wear a harness when operating this unit with a blade. A harness is also recommended when using trimmer line.
- 

If unit is used as a brushcutter, beware of blade thrust. A jammed blade can cause the unit to jerk suddenly and may cause the operator to lose control of the unit.


IMPORTANT!

The operational procedures described in this manual are intended to help you get the most from this unit as well as to protect you and others from harm. These procedures are guidelines for safe operation under most conditions, and are not intended to replace any safety rules and/or laws that may be in force in your area. If you have questions regarding your 2510 series hand held power equipment, or if you do not understand something in this manual, your Shindaiwa dealer will be glad to assist you. You may also contact Shindaiwa Inc. at the address printed on the back of this Manual.

Safety Instructions

Work Safely


Shindaiwa trimmers operate at very high speeds and can do serious damage or injury if they are misused or abused. Never allow a person without training or instruction to operate this unit!


**WARNING!**

Never make unauthorized attachment installations. Do not use attachments not approved by Shindaiwa for use on this unit.

Stay Alert

You must be physically and mentally fit to operate this unit safely.

**WARNING!**



Never operate power equipment of any kind if you are tired or if you are under the influence of alcohol, drugs, medication or any other substance that could affect your ability or judgement.

Safety Instructions



WARNING! Use Good Judgment

ALWAYS wear eye protection to shield against thrown objects.

NEVER run the engine when transporting the unit.

NEVER run the engine indoors! Make sure there is always good ventilation. Fumes from engine exhaust can cause serious injury or death.

ALWAYS clear your work area of trash or hidden debris that could be thrown back at you or toward a bystander.

ALWAYS use the proper cutting tool for the job.

ALWAYS stop the engine immediately if it suddenly begins to vibrate or shake. Inspect for broken, missing or improperly installed parts or attachments.

NEVER extend trimming line beyond the length specified for your unit.

ALWAYS keep the unit as clean as practical. Keep it free of loose vegetation, mud, etc.

ALWAYS hold the unit firmly with both hands when cutting or trimming, and maintain control at all times.

ALWAYS keep the handles clean.

ALWAYS disconnect the spark plug wire before performing any maintenance work.

ALWAYS, if a saw blade should bind fast in a cut, shut off the engine immediately. Push the branch or tree to ease the bind and free the blade.

The Properly Equipped Operator

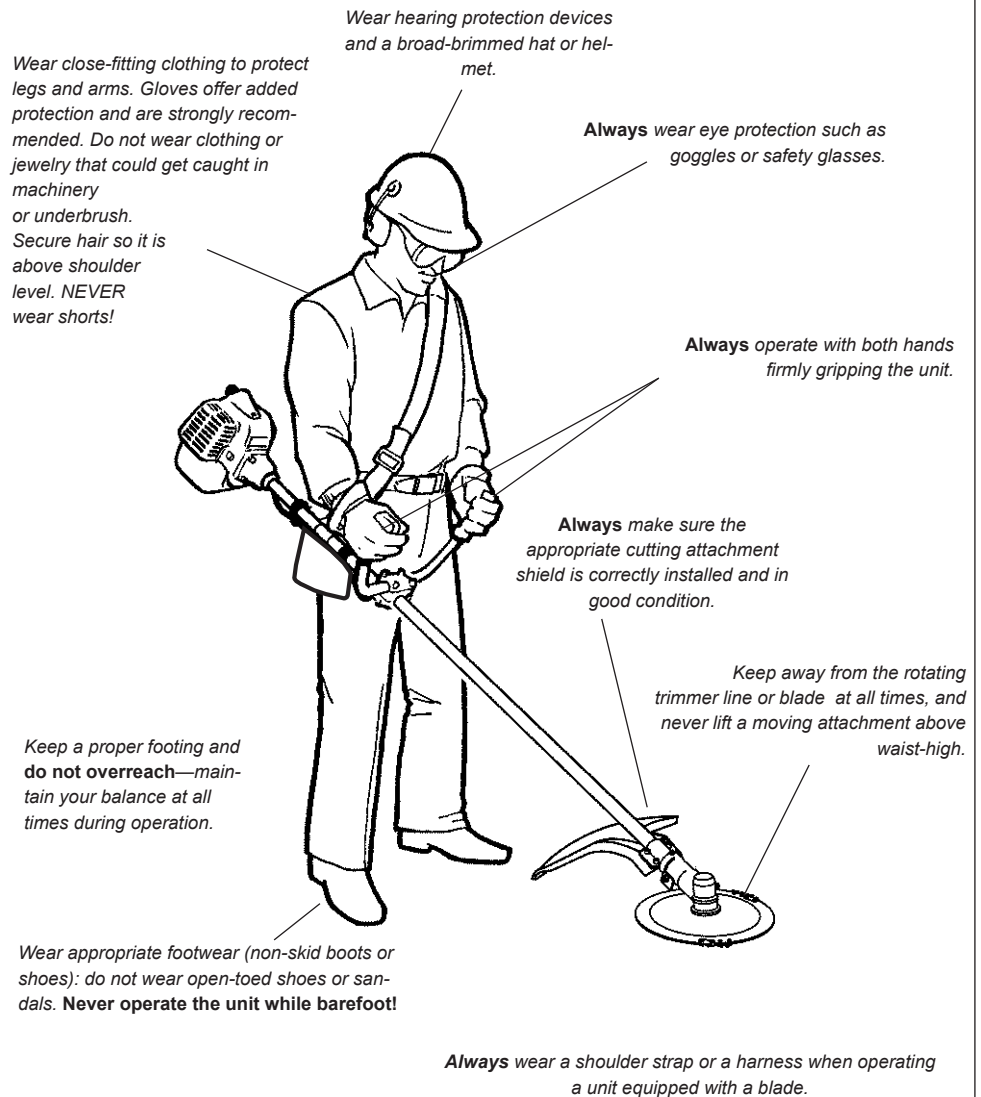


Figure 1

Be Aware of the Working Environment


Avoid long-term operation in very hot or very cold weather.

Make sure bystanders or observers outside the 50-foot "danger zone" wear eye protection.



Figure 2

Safety Labels

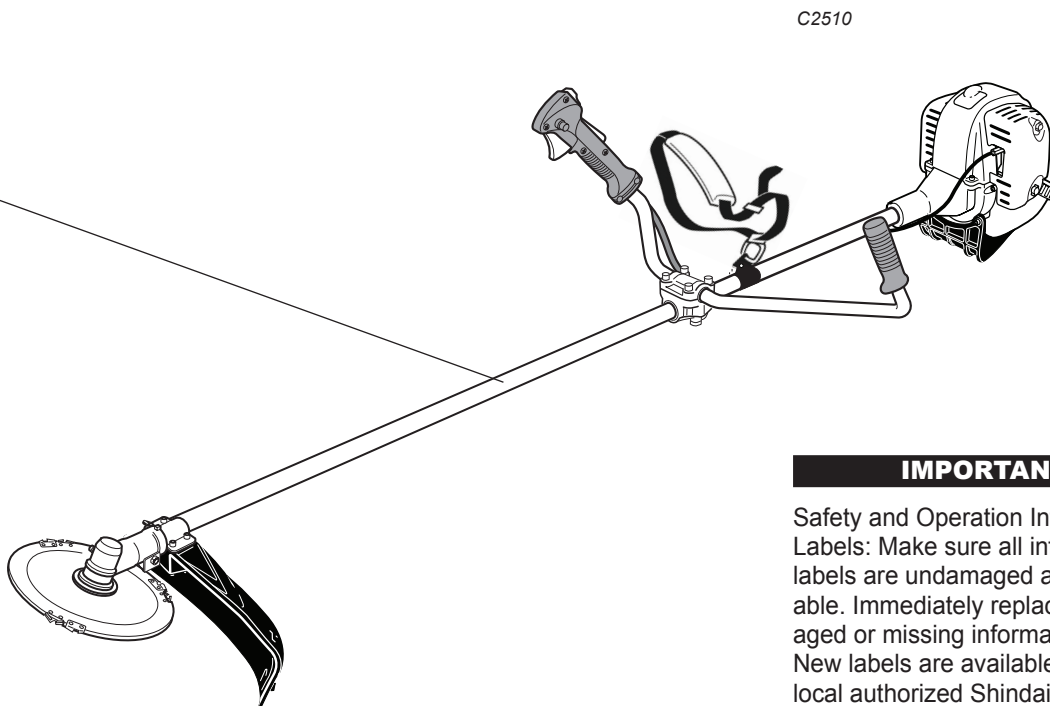


IMPORTANT!

Safety and Operation Information Labels: Make sure all information labels are undamaged and readable. Immediately replace damaged or missing information labels. New labels are available from your local authorized Shindaiwa dealer.

Figure 3

Product Description

C2510 BRUSHCUTTER

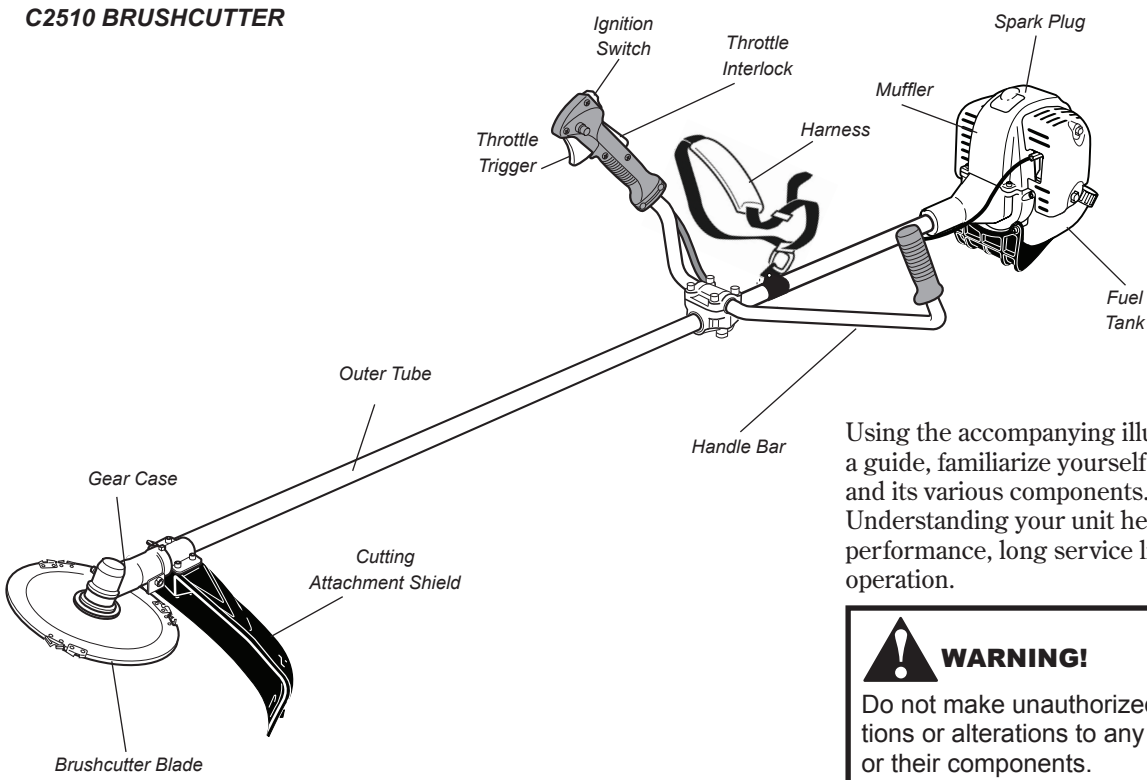


Using the accompanying illustrations as a guide, familiarize yourself with this unit and its various components. See Figure 4. Understanding your unit helps ensure top performance, long service life, and safer operation.

WARNING!

Do not make unauthorized modifications or alterations to any of these units or their components.

Figure 4

Specifications C2510

C2510X dry weight (less attachments)	11.5 lb./5.2 kg
Engine model	SF2510E
Engine type	 with Power Boost Chamber
Bore x stroke	1.3 x 1.1 in./34 x27 mm
Displacement	1.5 cu. in./ 24.5 cc
Maximum power	1.1 HP/0.8 kW @ 7500 rpm (min-1)
Fuel/oil ratio	50:1 with ISO-L-EGD or JASO FC class 2-cycle mixing oil*
Carburetor type	Walbro WYL, diaphragm-type
Fuel tank capacity	20.3 oz./600 ml
Ignition	One-piece electronic, program-controlled
Spark plug	NGK CMR5H

Air cleaner type	Non-reversible heavy-duty two-stage filter element
Starting method	Recoil
Stopping method	Slide switch
Transmission type	Automatic, centrifugal clutch w/bevel gear

EPA Emission Compliance Period** Category A



*meets or exceeds these specifications and is recommended for all Shindaiwa products.

** The EPA emission compliance referred to on the emission compliance label located on the engine, indicates the number of operating hours for which the engine has been shown to meet Federal emission requirements. Category C = 50 hours (Moderate), B = 125 hours (Intermediate) and A = 300 hours (Extended).

Specifications are subject to change without notice.

This unit comes fully assembled with the exception of the handlebar cutting attachment shield and cutting attachment.

Prior to Assembly

Before assembling, make sure you have all the components required for a complete unit and inspect unit and components for any damage.

- Engine/Outer tube assembly
- Handlebar and Throttle assembly
- Cutting attachment
- Kit containing cutting attachment shield mounting bracket and hardware, this owner's/operator's manual and tool kit for routine maintenance. Tool kits vary by model and may include a hex wrench set, a spark plug/screwdriver combination wrench, and a spanner.

IMPORTANT!

The terms "left", "left-hand", and "LH"; "right", "right-hand", and "RH"; "front" and "rear" refer to directions as viewed by the operator during normal operation.

Assembly

Cutting Attachment Shield

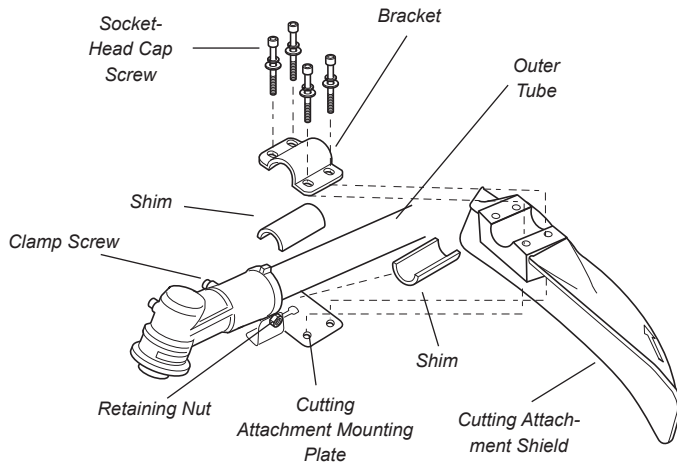


Figure 9

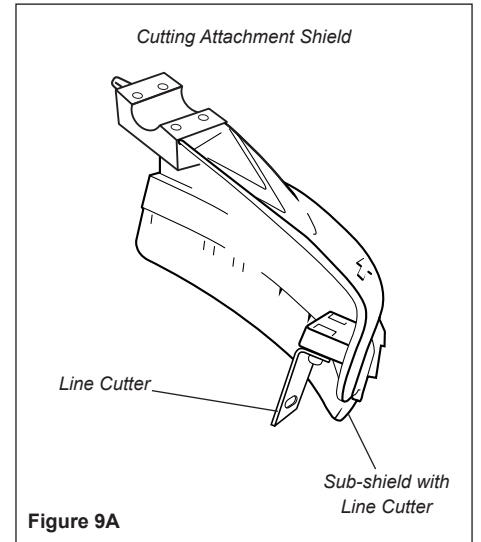


Figure 9A

Install the Cutting Attachment Shield C2510.

1. Insert the cutting attachment shield between the outer tube and the cutting attachment mounting plate. See Figure 9.

NOTE:

It may be necessary to loosen the retaining nut and clamp screw to adjust cutting attachment shield mounting plate.

2. Fit the two shims and the bracket over the outer tube and loosely install the four socket-head screws. See Figure 9.
3. Tighten the four socket-head cap screws to secure the cutting attachment shield.

CAUTION!

Make sure the clamp screw and retaining nut are securely tightened before tightening the four socket-head cap screws.



WARNING!

NEVER operate the unit without the cutting attachment shield installed and tightly secured!

Sub-Shield C2510.

(when trimmer head is in use)

1. Attach the shield extension to the cutting attachment shield. See figure 9B.



WARNING!

NEVER use this machine without sub-shield when using a trimmer head.

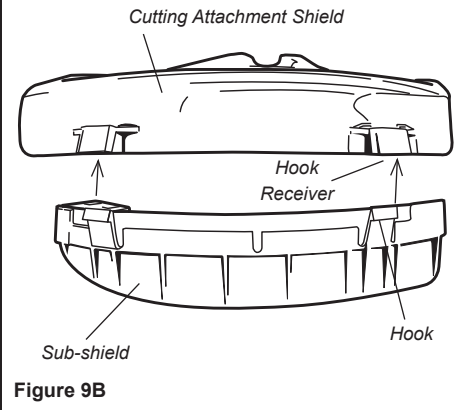


Figure 9B

CAUTION!


Make sure the sub-guard is completely hooked at the hook receiver.

Assembly (Continued)

Handle Bar C2510

Install the handlebar:


1. Use the 4 mm hex wrench to remove the lower cap retaining screws from the handlebar bracket. Remove the cap from the bracket. See Figure 5.
2. Position the handle on the outer tube forward of Handle Positioning Label as shown in Figure 5. Reassemble the lower cap to the handlebar bracket in the reverse order of disassembly.
3. Locate the handle in the best position for operator comfort.
4. Firmly tighten both lower cap retaining screws.
5. Install the protector sleeve on the outer tube. See Figure 5.

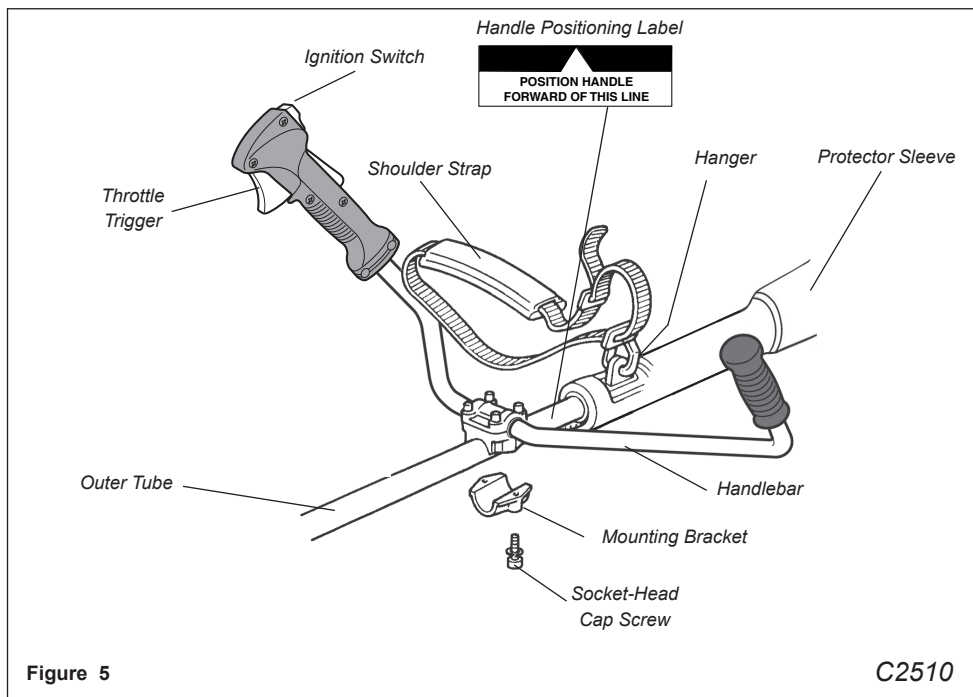

Adjustments


Adjust Throttle Lever Free Play

The throttle lever free play should be approximately 3/16-1/4 inch (4-6 mm). See Figure 6. Make sure that the throttle lever operates smoothly without binding. If it becomes necessary to adjust the lever free play, follow the procedures and illustrations that follow.

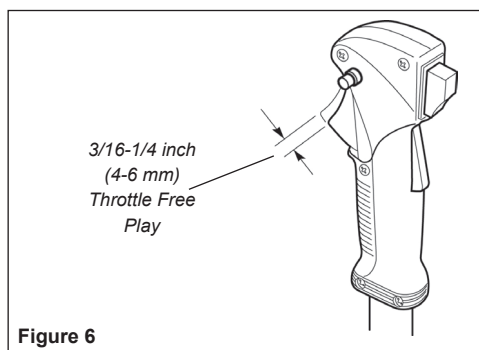

1. Remove the air cleaner cover by loosening the two thumbscrews. See Figure 7.
2. Loosen the lock nut on the cable adjuster. See Figure 8.

3. Turn the cable adjuster in or out as required to obtain proper free play 3/16-1/4 inch (4-6 mm). See Figure 8.
4. Tighten the lock nut.

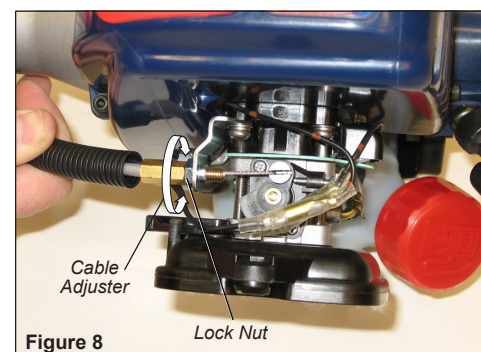



5. Reinstall the air cleaner cover.

Installing a Trimmer Head

NOTE:

The C2510 is shipped with Holder A, the blade retainer (safety clip), Holder B, shaft bolt, and bolt guard installed. The shaft bolt is a LEFT-HAND thread. Remove it by turning **CLOCKWISE**!

1. With the gear case output shaft facing up, rotate the gearshaft and holder A until the hole in holder A aligns with the matching hole in the gear case flange, and then lock the holder to the gear by inserting the long end of the hex wrench through both holes. See Figure 10.
2. Using the combination spark plug/ screwdriver wrench, remove the shaft bolt and bolt guard. See Figure 10.

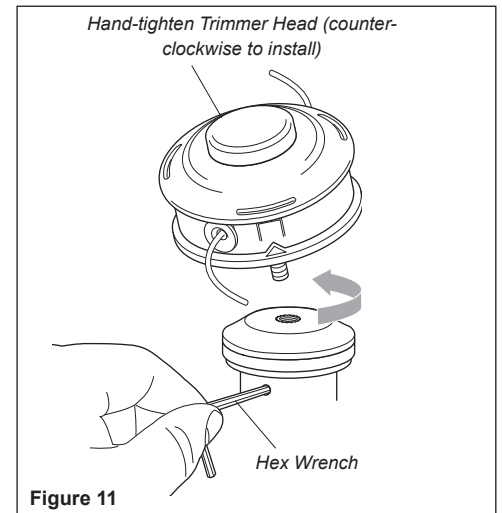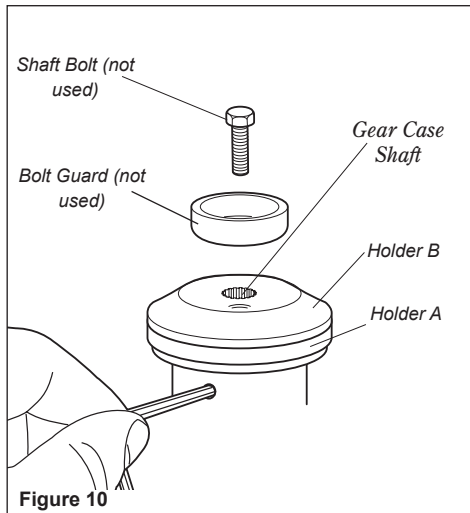

NOTE:

Make sure holder B is installed on the gear-case with the splined hole engaging the gear-case shaft.

3. Using the hex wrench to secure Holder A, install and hand-tighten the trimmer head (counter-clockwise to install). See Figure 11.
5. Remove the hex wrench from the gear case and holder.

The C2510 should now be completely assembled to operate as a trimmer.

Installing a Blade

Turn the C2510 upside down so the gear case output shaft is facing UP and remove the shaft bolt, bolt guard and holder B from the gear case shaft.

1. Align the hole in blade holder A with the matching hole in the gear case flange and then temporarily lock the output shaft by inserting a hex wrench through both holes. See Figure 12.
2. Slide the safety clip off-center. See Figure 13.
3. Fit the blade over the safety clip and then center it over the flange on holder A. See Figure 14.

CAUTION!

Install the blade so its printed surface is visible to the operator when the brushcutter is in the normal operating position.



WARNING!

The blade must fit flat against the holder flange. The blade mounting hole must be centered over the raised boss on blade holder A.

NOTE:

When installing certain blades, it may be necessary to temporarily remove the safety clip.

4. Lock the blade in place by centering the safety clip on the output shaft. See Figure 14.



WARNING!

Never operate the C2510 without the safety clip in place!

IMPORTANT!

The machined recess in holder B must completely surround the safety clip, and both holders must be flat against the surface of the blade.

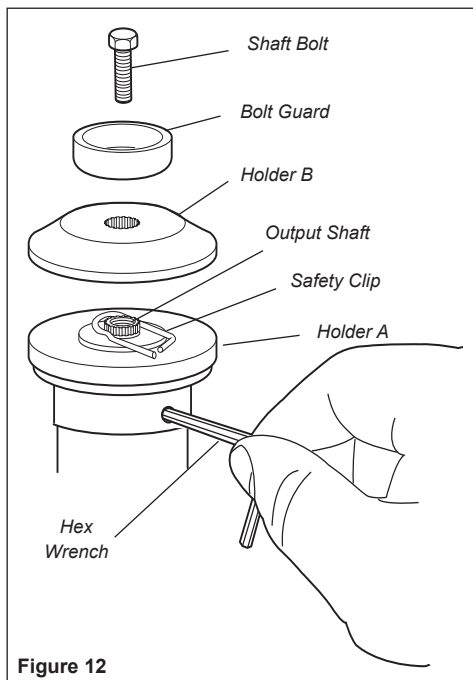


Figure 12

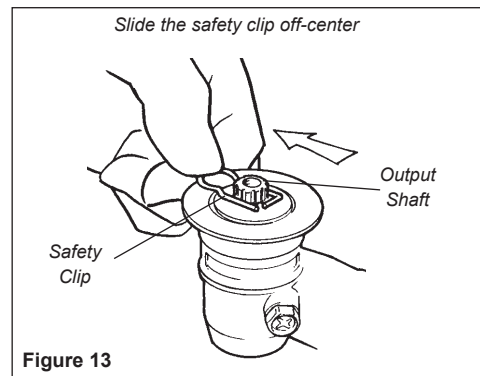


Figure 13

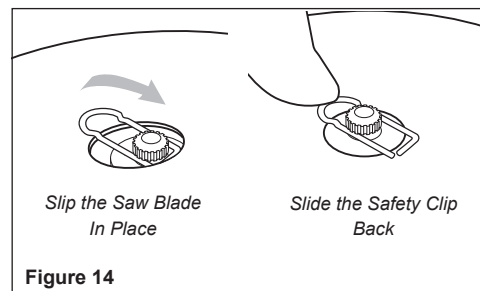


Figure 14

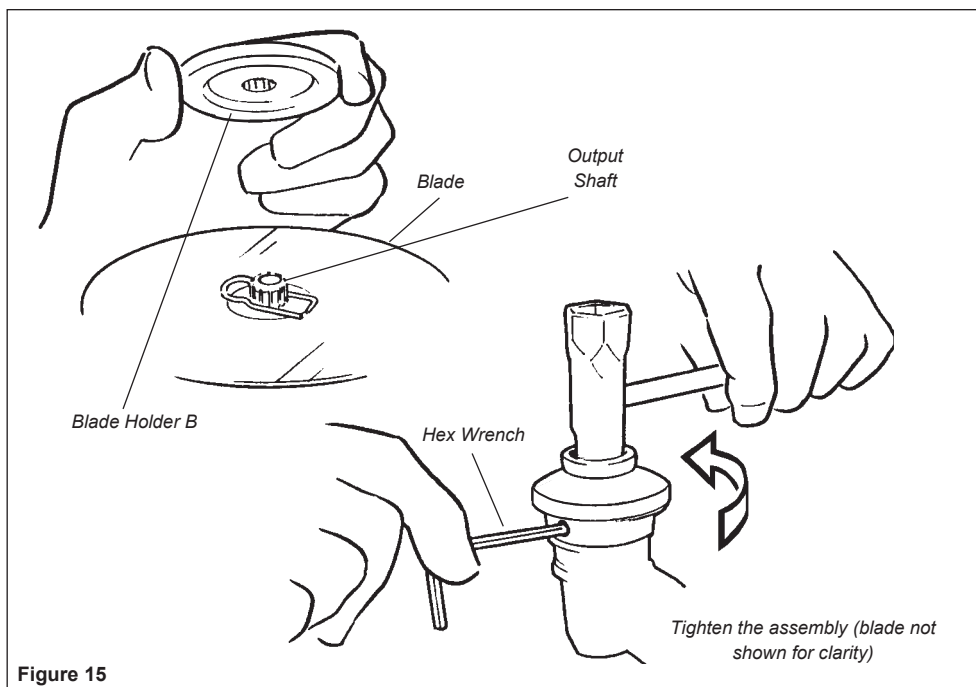


Figure 15

5. Install blade holder B on the output shaft. See Figure 15. The recess in the holder must completely cover the safety clip, and must fit tightly against the blade.
6. Install the bolt guard and then the blade retaining bolt. Using the combination spark plug wrench/screwdriver, tighten the bolt firmly in a counter-clockwise direction.
7. Remove the hex wrench.

The C2510 should now be completely assembled and ready for use with a blade.

Mixing Fuel

CAUTION!

Some types of gasoline contain alcohol as an oxygenate. Oxygenated gasoline may cause increased operating temperatures. Under certain conditions, alcohol-based gasoline may also reduce the lubricating qualities of some 2-cycle mixing oils. Never use any type of gasoline containing more than 10% alcohol by volume! Generic oils and some outboard oils may not be intended for use in high-performance C4 engines, and should never be used in your Shindaiwa engine.

CAUTION!


This engine is designed to operate on a 50:1 mixture consisting of unleaded gasoline and ISO-L-EGD or JASO FC class 2-cycle mixing oil only. Use of non-approved mixing oils can lead to excessive carbon deposits.


- Use only fresh, clean unleaded gasoline with a pump octane of 87 or higher.
- Mix all fuel with a 2-cycle air-cooled mixing oil that meets or exceeds ISO-L-EGD and/or JASO FC classified oils at 50:1 gasoline/oil ratio.

Examples of 50:1 mixing quantities

- 1 gallon of gasoline to 2.6 oz. mixing oil
- 5 liters of gasoline to 100 ml. mixing oil

IMPORTANT!

Mix only enough fuel for your immediate needs! If fuel must be stored longer than 30 days and  oil with fuel stabilizer is not used, it should first be treated with a fuel stabilizer such as STA-BIL™.

 Oil is a registered JASO FC classified oil and also meets or exceeds ISO-L-EGD performance requirements. Shindaiwa One is recommended for use in all Shindaiwa low emissions engines and also includes a fuel stabilizer.

Filling the Fuel Tank



WARNING! Minimize the Risk of Fire

- **NEVER** smoke or light fires near the engine.
- **ALWAYS** stop the engine and allow it to cool before refueling. Avoid overfilling and wipe off any fuel that may have spilled.
- **ALWAYS** inspect the unit for fuel leaks before each use. During each refill, check that no fuel leaks from around the fuel cap and/or fuel tank.

If fuel leaks are evident, stop using the unit immediately. Fuel leaks must be repaired before using the unit.


- **ALWAYS** move the unit at least 10 feet (3 meters) away from a fuel storage area or other readily flammable materials before starting the engine.
- **NEVER** place flammable material close to the engine muffler.
- **NEVER** operate the engine without the muffler and spark arrester screen in place.

1. Place the trimmer on a flat, level surface.
2. Clear any dirt or other debris from around the fuel filler cap.
3. Remove the fuel cap, and fill the tank with clean, fresh fuel.
4. Reinstall the fuel filler cap and tighten firmly.


Starting the Engine

IMPORTANT!

Engine ignition is controlled by a two position switch mounted on the throttle housing labeled, "I" for ON or START and "O" for OFF or STOP.

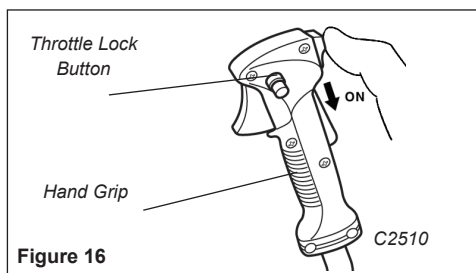

1. Slide the ignition switch to the "ON" position. See Figure 16.
2. Set the throttle lever to the "fast idle";
 - a. Squeeze the throttle lever toward the handgrip.
 - b. Depress and hold the throttle lock button.
 - c. While depressing the throttle lock button, release the throttle lever. See Figure 16.

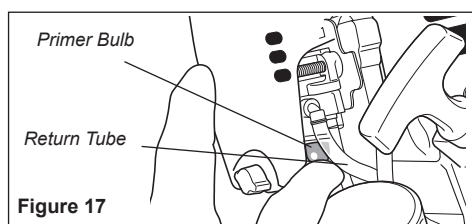


3. Press the primer bulb until fuel can be seen flowing in the transparent return tube.

IMPORTANT!

The primer system only pushes fuel through the carburetor. Repeatedly pressing the primer bulb will not flood the engine with fuel.

4. Set the choke lever to the CLOSED position if engine is cold.

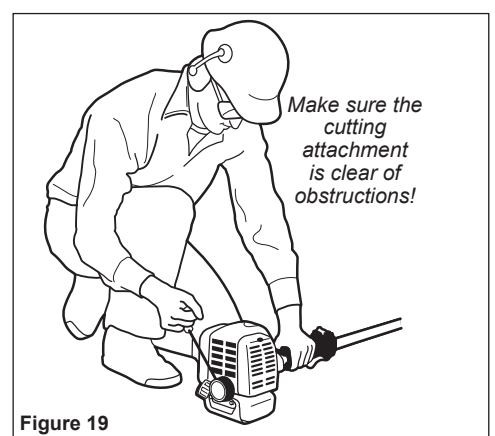

5. While holding the outer tube firmly with left hand. Use your other hand to slowly pull the recoil starter handle until resistance is felt, then pull quickly to start the engine.

CAUTION!

Do not pull the recoil starter to the end of the rope travel. Pulling the recoil starter to the end of the rope travel can damage the starter.

Starting the Engine (continued)



WARNING!

The cutting attachment may rotate when the engine is started!

6. When the engine starts, slowly move the choke lever to the "OPEN" position. See Figure 20. (If the engine stops after the initial start, close the choke and restart.)



Figure 20



WARNING!

Never start the engine from the operating position.

7. Operating the throttle will automatically disengage the fast idle setting.

IMPORTANT!

If the engine fails to start after several attempts with the choke in the closed position, the engine may be flooded with fuel. If flooding is suspected, move the choke lever to the open position and repeatedly pull the recoil starter to remove excess fuel and start the engine. If the engine still fails to start, refer to the troubleshooting section of this manual.

When the Engine Starts...

- After the engine starts, allow the engine to warm up at idle 2 or 3 minutes before operating the unit.
- After the engine is warm, pick up the unit and clip on the shoulder strap. See page 12.
- Advancing the throttle makes the cutting attachment turn faster; releasing the throttle permits the attachment to stop turning. If the cutting attachment continues to rotate when the engine returns to idle, carburetor idle speed should be adjusted (see "Adjusting Engine Idle" below).

Stopping the Engine

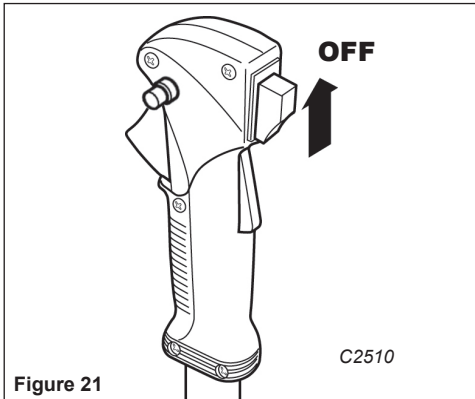


Figure 21

Idle the engine briefly before stopping (about 2 minutes), then slide the ignition switch to the "O" (Engine OFF) position.

Adjusting Engine Idle

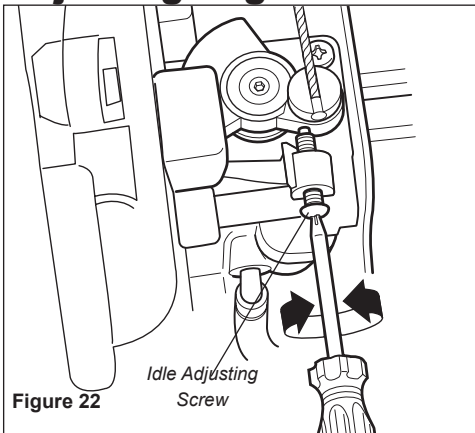


Figure 22

The engine must return to idle speed whenever the throttle lever is released. Idle speed is adjustable, and must be set low enough to permit the engine clutch to disengage the cutting attachment.

Idle Speed Adjustment



WARNING!

The cutting attachment must NEVER rotate at engine idle! If the idle speed cannot be adjusted by the procedure described here, return the trimmer to your Shindaiwa dealer for inspection.

1. Place the trimmer on the ground, then start the engine, and then allow it to idle 2-3 minutes until warm.
2. If the attachment rotates when the engine is at idle, reduce the idle speed by turning the idle adjustment screw counter-clockwise. See Figure 22.
3. If a tachometer is available, the engine idle speed should be final adjusted to 3,000 (± 300) RPM (min^{-1}).
4. Carburetor fuel mixture adjustments are preset at factory and cannot be serviced in the field.

Checking Unit Condition

NEVER operate the unit with the cutting attachment shield or other protective devices removed!



WARNING!

A cutting attachment shield or other protective device is no guarantee of protection against ricochet. **YOU MUST ALWAYS GUARD AGAINST FLYING DEBRIS!**

Use only authorized Shindaiwa parts and accessories with your Shindaiwa trimmer. Do not make modifications to this unit without written approval from Shindaiwa, Inc.

ALWAYS make sure the cutting attachment is properly installed and firmly tightened before operation.

NEVER use a cracked or warped cutting attachment: replace it with a serviceable one.

ALWAYS make sure the cutting attachment fits properly into the appropriate attachment holder. If a properly installed

attachment vibrates, replace the attachment with new one and re-check.

ALWAYS stop the engine immediately and check for damage if you strike a foreign object or if the unit becomes tangled. Do not operate with broken or damaged equipment.

NEVER allow the engine to run at high RPM without a load. Doing so could damage the engine.

NEVER operate a unit with worn or damaged fasteners or attachment holders.

Shoulder Strap C2510

IMPORTANT!

Adjust the shoulder strap so the shoulder pad rests comfortably on the off-side shoulder and the cutting path of the cutting attachment is parallel to the ground. Make sure all hooks and adjustment devices are secure.



WARNING!

Always wear a shoulder strap or harness when operating this unit. Using a harness with a brushcutter allows you to maintain proper control of the unit and reduces fatigue during extended operation.


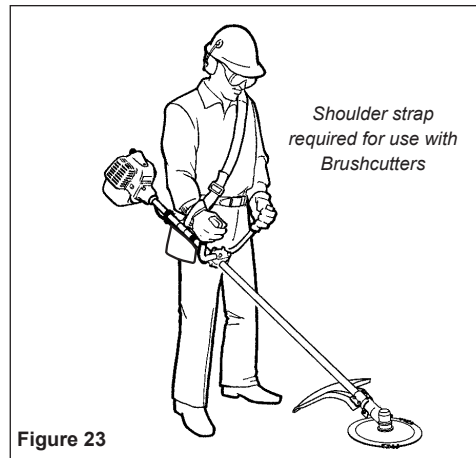


Figure 23

Double Shoulder Harness (optional accessory)

Adjust the double shoulder harness straps so the shoulder pads rest comfortably on the shoulders and the cutting path of the blade is parallel to the ground. Make sure all hooks and adjusting devices are secure.

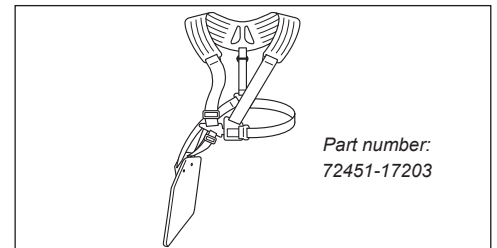

Cutting Grass—Units equipped with a trimmer head

Your Shindaiwa unit may be equipped with one of several Shindaiwa trimmer head models, each with features for specific applications and/or operational requirements.

NOTE:

For proper operation, always refer to the instructions accompanying the trimmer head being used. Available trimmer head styles include:

- **Semi-automatic.** Trimmer line is indexed when the operator taps the trimmer head on the ground during operation.
- **Manual.** The operator indexes line manually with the grass trimmer stopped.
- **Fixed.** The operator must stop the unit and add new lengths of trimmer line manually.
- **Flail.** This device, designed for clearing weeds and light brush, features three nylon blades attached to the head by pivots.

NOTE:

Additional hardware may be required to mount the Fixed Line or the Flail type trimmer heads.

CAUTION!

Do not push the rotating line into trees, wire fences or any material that could tangle or break line ends.

Engine Operating Speeds

Operate the unit at full throttle while cutting grass.

CAUTION!

Operation of trimmer without a cutting attachment shield and using excessive line length can lead to premature clutch failure.

CAUTION!

Operation at low RPM can lead to premature clutch failure.

Hold the trimmer so the trimmer head is angled slightly into the area to be cut. To ensure maximum trimmer-line service life, cut only with the tip of the trimmer line. Cut grass by swinging the trimmer from left to right. Keep the trimmer head horizontal. See Figure 24.

Trimming and Mowing Grass

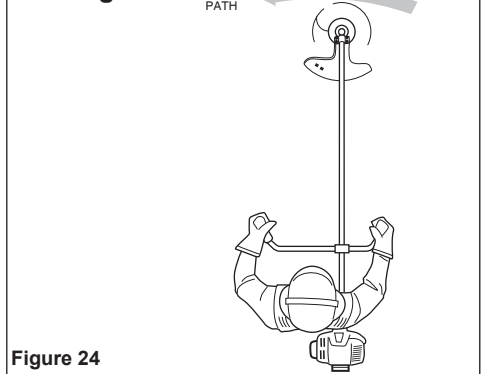


Figure 24

Edging

Tilt the handle about 100° to the left (from horizontal) and move forward, holding the trimmer vertically as shown in Figure 25.



Figure 25

Using a Blade C2510



WARNING!

- Before working with a blade-equipped unit, always inspect and clean the area of objects that could interfere with or damage the blade.
- Never use a blade near sidewalks, fence posts, buildings or other objects that could cause injury or damage.
- Never use a blade for purposes other than those for which it was designed.
- Whenever you strike a hard object with a blade, always stop the brushcutter and carefully inspect the blade for damage. **NEVER OPERATE THE BRUSHCUTTER WITH A DAMAGED BLADE!**
- A blade-equipped unit must be equipped with a bicycle-type handlebar or barrier bar as well as a harness or shoulder strap.
- Always make sure the cutting attachment shield is properly installed before operating this unit.

Blade Thrust

'Blade thrust' is a sudden sideways or backward motion of the brushcutter. Such motion may occur when the blade jams or catches on an object such as a sapling tree or tree stump. **BE CONSTANTLY ALERT FOR BLADE THRUST AND GUARD AGAINST ITS EFFECTS!**

Brushcutter Handlebar

A brushcutter handlebar or barrier bar helps prevent the operator from moving forward, or the unit moving rearward, thus preventing inadvertent bodily contact with the blade. **ALWAYS KEEP THE HANDLEBAR OR BARRIER BAR SECURELY IN PLACE ON THE UNIT!**

Brushcutter Shoulder Strap

A shoulder strap provides additional protection against blade thrust. In addition, a shoulder strap gives significant support and comfort to help ensure safe and efficient operation. When operating a C2510 with a blade, make sure both the handle and shoulder strap are adjusted to the size of the operator using the unit.

Engine Operating Speeds

Operate the unit at full throttle while cutting. Best fuel efficiency is obtained by releasing the throttle when swinging back after a cut.

- To prevent possible engine damage, do not allow the brushcutter to run at high speeds without a load.
- Avoid operating the engine at low speeds. Doing so can lead to rapid clutch wear. In addition, slow-speed operation tends to cause grass and debris to wrap around the cutting head.

Operating Units with a Blade

The blade rotates counter-clockwise. For best performance and to minimize being stuck by debris, move the blade from right to left while advancing on your work.

Position the blade so cuts are made between the blade's 8 o'clock and 10 o'clock positions (as viewed from above). **DO NOT** cut between the 10 o'clock and 5 o'clock positions.



WARNING!

When cutting wood with a saw, feed the blade slowly—never strike or "slam" a spinning blade against the wood.



WARNING!

DO NOT use 2-tooth or non-Shindaiwa approved 4-tooth cutting blades with Shindaiwa trimmers and brushcutters.

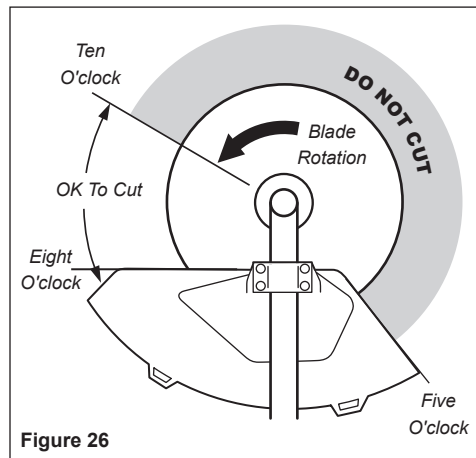


Figure 26

Vertical Cuts

Hold the brushcutter with the blade at a 90° angle to the ground so the blade's bottom edge rotates toward the operator. Move the blade from top to bottom through the cut, and cut only with the bottom edge of the blade.



WARNING!

When making vertical cuts, never allow the blade to exceed waist height.

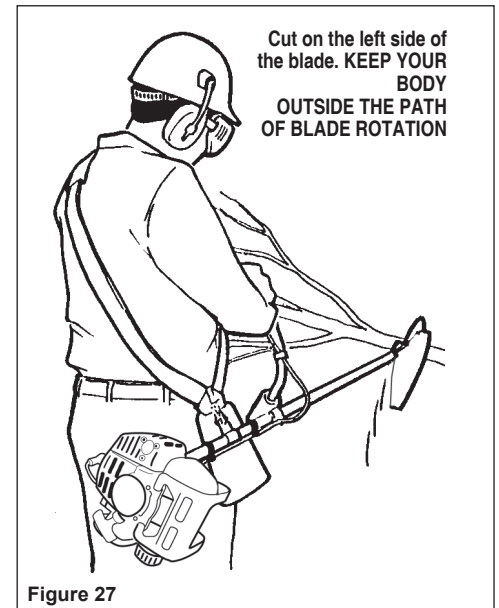


Figure 27

General Maintenance

IMPORTANT!

MAINTENANCE, REPLACEMENT OR REPAIR OF EMISSION CONTROL DEVICES AND SYSTEMS MAY BE PERFORMED BY ANY REPAIR ESTABLISHMENT OR INDIVIDUAL; HOWEVER, WARRANTY REPAIRS MUST BE PERFORMED BY A DEALER OR SERVICE CENTER AUTHORIZED BY SHINDAIWA CORPORATION. THE USE OF PARTS THAT ARE NOT EQUIVALENT IN PERFORMANCE AND DURABILITY TO AUTHORIZED PARTS MAY IMPAIR THE EFFECTIVENESS OF THE EMISSION CONTROL SYSTEM AND MAY HAVE A BEARING ON THE OUTCOME OF A WARRANTY CLAIM.



WARNING!

Before performing any maintenance, repair or cleaning work on the unit, make sure the engine and cutting attachment are completely stopped. Disconnect the spark plug wire before performing service or maintenance work.



WARNING!

Non-standard parts may not operate properly with your unit and may cause damage and lead to personal injury.

NOTE:

Using non-standard replacement parts could invalidate your Shindaiwa warranty.

Muffler

This unit must never be operated with a faulty or missing spark arrester or muffler. Make sure the muffler is well secured and in good condition. A worn or damaged muffler is a fire hazard and may also cause hearing loss.

Spark Plug

Keep the spark plug and wire connections tight and clean.

Fasteners

Make sure nuts, bolts, and screws (except carburetor adjusting screws) are tight.

Blades

Keep blades sharp and check blade condition frequently. If a blade's performance changes suddenly, stop the engine and check the blade for cracks or other damage. Replace a damaged blade IMMEDIATELY!



WARNING!

■ Never repair a damaged blade by welding, straightening, or by modifying its shape. An altered blade may break during operation, resulting in serious personal injury.

■ Blades are **not** interchangeable between Shindaiwa edgers and trimmer/brushcutter models. Operating any unit with a blade or attachment not approved for that unit can be hazardous and may cause serious injury.

Daily Maintenance

Prior to each work day, perform the following:

- Remove dirt or debris from the engine, check the cooling fins and air cleaner for clogging and clean them as necessary.
- Carefully remove any accumulation of dirt or debris from the muffler or the fuel tank. Dirt build-up in these areas could cause engine overheating, induce premature wear, or create a fire hazard.
- Check for loose or missing screws or components. Make sure the cutting attachment is securely fastened.
- Check the entire unit for leaking fuel or grease.

10-Hour Maintenance

(more frequently in dusty conditions)

1. Remove the air cleaner cover by loosening the two thumbscrews. See Figure 28A.
2. Remove and inspect the pre-filter. If the pre-filter is torn or otherwise damaged, replace it with a new one. See Figure 28B.
3. Clean the pre-filter with soap and water. Let dry before reinstalling.
4. Inspect the air filter element. If the element is damaged or distorted, replace it with a new one.
5. Tap filter gently on a hard surface to dislodge debris from element or use compressed air from the inside to blow debris out and away from the air filter element.

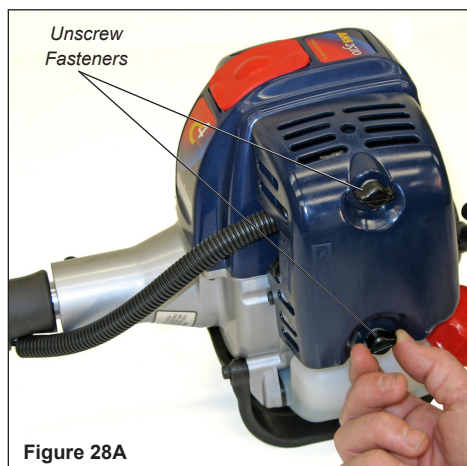


Figure 28A

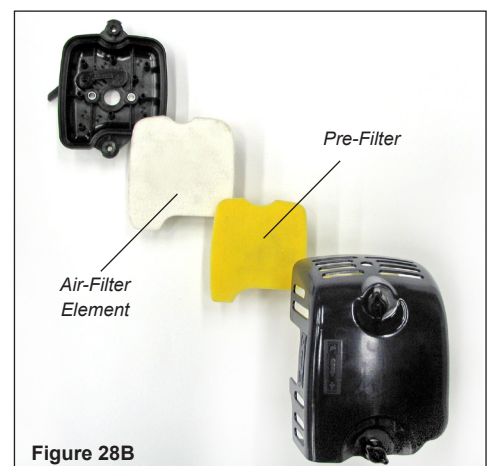


Figure 28B

IMPORTANT!


Direct the air stream at the inside face of the filter only!

6. Install the filter element, pre-filter and cover in the reverse order of removal.

CAUTION!

Never operate the unit if the air cleaner assembly is damaged or missing!

10/15-Hour Maintenance

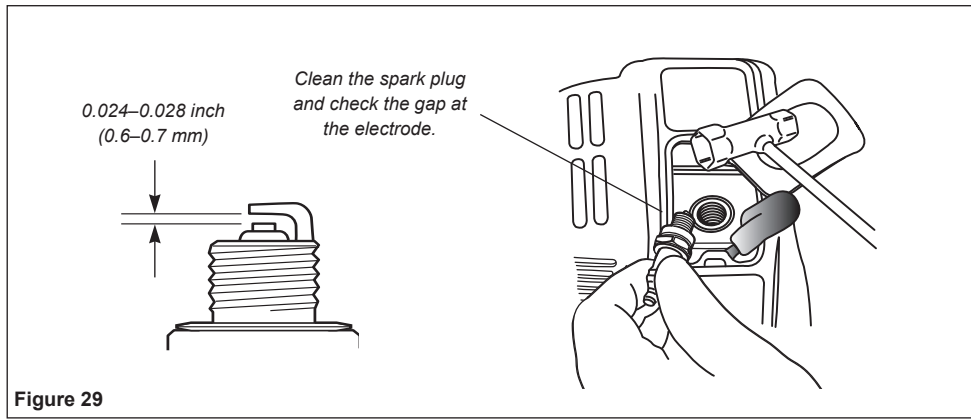

Every 10 to 15 hours of operation:

Remove and clean the spark plug. Adjust the spark plug electrode gap to 0.024 - 0.028 inch (0.6 - 0.7 mm). If the spark plug must be replaced, use only an NGK CMR5H or equivalent resistor type spark plug of the correct heat range. See Figure 29.

NOTE:

The NGK CMR5H also meets the requirements for electro magnetic compliance (EMC).

CAUTION!

Before removing the spark plug, clean the area around the plug to prevent dirt and debris from getting into the engine's internal parts.

50-hour Maintenance



Every 50 hours of operation (more frequently in dusty or dirty conditions):

- Remove and clean the cylinder cover and clean grass and dirt from the cylinder fins.
- Remove the cutting attachment, cutting attachment holder and gear shaft collar. Remove the filler plug from the side of the gear case and press new grease into the gear case until old grease is pushed out. Use only lithium-base grease such as Shindaiwa Gear Case Lubricant or equivalent. See Figure 30.
- Lubricate main shaft splines.
- Use a hooked wire to extract the fuel filter from inside the fuel tank. See Figure 31.

CAUTION!

Make sure you do not pierce the fuel line with the end of the hooked wire. The line is delicate and can be damaged easily.

Remove and replace the filter element. Before reinstalling the new filter element, inspect the condition of all the fuel system components (fuel pick-up line, fuel return line, tank vent line, tank vent, fuel cap and fuel tank). If damage, splitting or deterioration is noted, the unit should be removed from service until it can be inspected or repaired by a Shindaiwa-trained service technician.

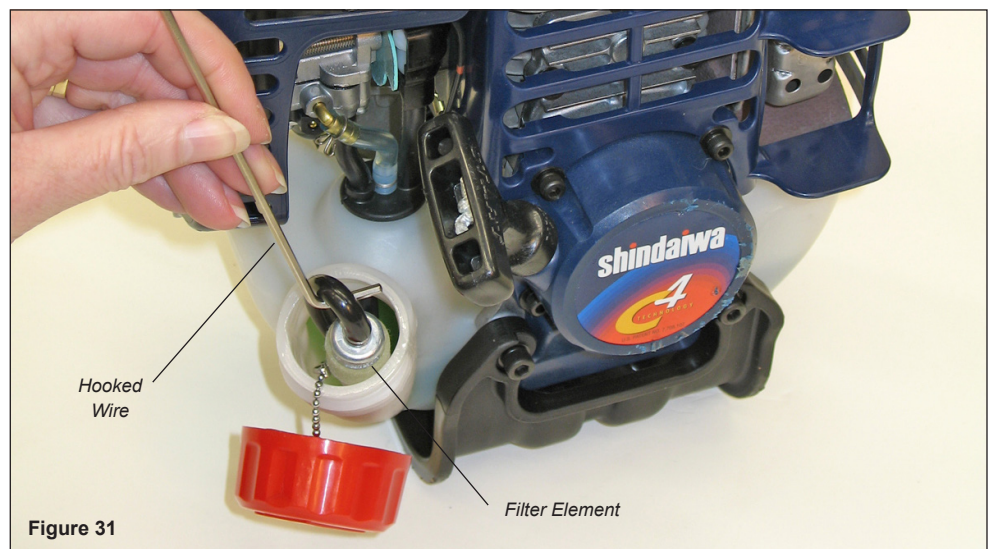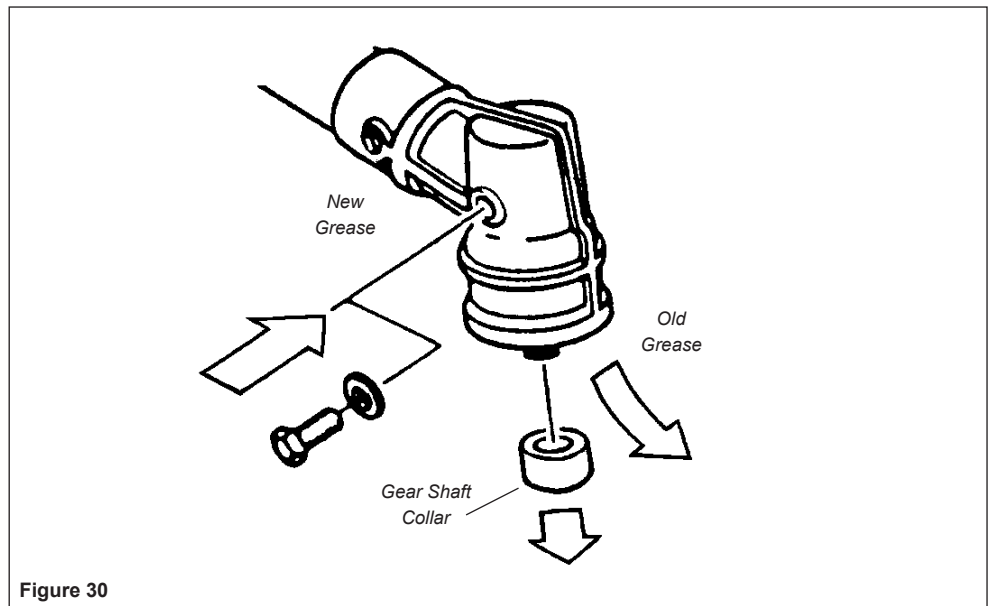

139/150-Hour Maintenance

Maintenance after first 139-hours, then every 150-hours thereafter.


- Combustion chamber should be decarbonized, and the valve clearance should be adjusted. It is highly recommended that this is done by a Shindaiwa-trained service technician.

Valve Adjustment


1. Remove cylinder cover, rocker arm cover, and set piston at TDC-compression.

CAUTION!

- Performing a valve adjustment incorrectly may cause hard starting and/or can damage the engine.
- If you are unfamiliar with this engine or uncomfortable with this procedure, consult with an authorized Shindaiwa servicing dealer.

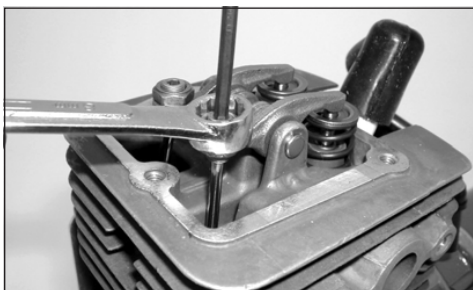

- Replace the spark plug annually: Use only NGK CMR5H or equivalent resistor type spark plug of the correct heat range. Set spark plug electrode gap to 0.024-0.028 inch (0.6-0.7 mm).

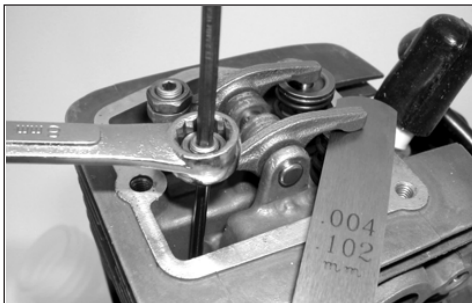

2. Loosen adjuster locknut so that the 2.5 mm Allen socket head adjustment screw can turn freely.
3. Insert .004" (0.10 mm) feeler gauge for both intake and exhaust between valve stem tip and rocker arm.
4. Turn adjustment screw (clockwise = tighter, counter-clockwise = looser) until feeler gauge is almost snug. Back off just enough to allow gauge to slip out with limited resistance.
5. While holding adjustment screw in place with Allen driver, tighten locknut with wrench.

NOTE:

The NGK CMR5H also meets the requirements for electro magnetic compliance (EMC).



6. Turn engine over several times, and return to TDC-compression. Recheck with proper feeler gauge to make sure clearance adjustment did not change as a result of tightening locknut. Readjust as necessary.
7. Replace rocker arm cover gasket to assure proper sealing and install cover.

IMPORTANT!

If new gasket is not available and/or old gasket is not damaged, old gasket may be reused. Never use cracked or damaged gaskets!

Spark Arrester Screen Maintenance

If the engine becomes sluggish and low on power, check and clean the spark arrester screen.



WARNING!

Never operate the unit with a damage or missing muffler or spark arrester! Operating with a missing or damaged spark arrester is a fire hazard and could also damage your hearing.

3. With a small flat bladed screwdriver remove the 2 screws holding the spark arrester screen and cover to the muffler. See Figure 32.
4. Remove the screen and clean it with a stiff bristle brush.
5. Inspect the cylinder exhaust port for any carbon buildup.

IMPORTANT!

If you note excessive carbon buildup, consult with an authorized Shindaiwa servicing dealer.

6. Reassemble the spark arrester, muffler and engine cover in the reverse order of disassembly.

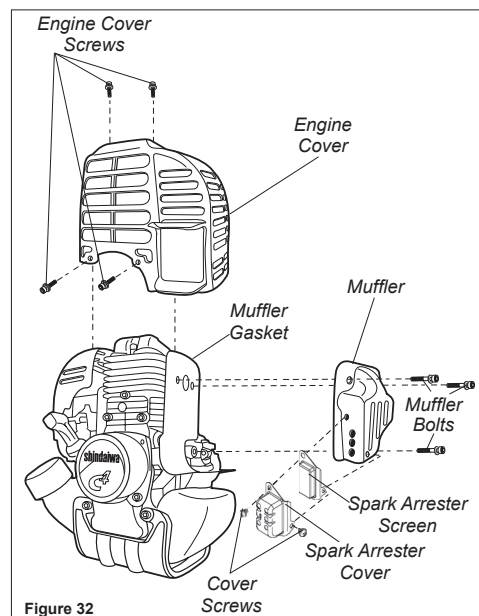


Figure 32


1. With a 3 mm hex wrench remove the 3 engine cover screws and the engine cover. See Figure 32.
2. With a 4 mm hex wrench remove the 3 muffler bolts and the muffler. See Figure 32.

Long Term Storage

Whenever the unit will not be used for 30 days or longer, use the following procedures to prepare it for storage:

- Clean external parts thoroughly.
- Drain all the fuel from the fuel tank.

IMPORTANT!

All stored fuels should be stabilized with a fuel stabilizer such as STA-BIL™, if  oil with fuel stabilizer is not used.

CAUTION!

Gasoline stored in the carburetor for extended periods can cause hard starting and could also lead to increased service and maintenance cost.

- Remove the remaining fuel from the fuel lines and carburetor.
1. Prime the primer bulb until no more fuel is passing through.
 2. Start and run the engine until it stops running.
 3. Repeat steps 1 and 2 until the engine will no longer start.

- Remove the spark plug and pour about 1/4 ounce of 2-cycle mixing oil into the cylinder through the spark plug hole. Slowly pull the recoil starter 2 or 3 times so oil will evenly coat the interior of the engine. Reinstall the spark plug.
- Before storing the unit, repair or replace any worn or damaged parts.
- Remove the air cleaner element from the carburetor and clean it thoroughly with soap and water. Let dry and reassemble the element.
- Store the unit in a clean, dust-free area.

Blade Sharpening

When the cutting edges of the blade become dull, they can be resharpened with a few strokes of a file. In order to keep the blade in balance, all cutting edges must be sharpened equally.

Shindaiwa Tornado™ Blade

To sharpen the cutters on a Shindaiwa Tornado Blade, use a 7/32-inch round file. File the leading edge of each tooth to a razor edge. The top plate of each tooth should angle back 30°.

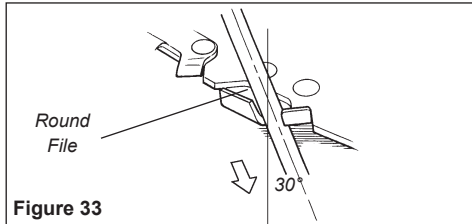


Figure 33



WARNING!

Sharpen only the cutting teeth of a blade. DO NOT alter the contour of the blade in any way.

Multiple-tooth Circular Blade

Use a round file to maintain a radius of 0.04 to 0.06" (1 to 1.5 mm) at the base of each tooth. Cutting edges must be offset equally on each side.

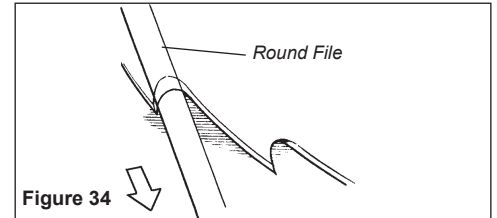


Figure 34

Troubleshooting Guide

ENGINE DOES NOT START

What To Check	Possible Cause	Remedy
Does the engine crank?	NO Faulty recoil starter. Fluid in the crankcase. Internal damage.	Consult with an authorized servicing dealer.
YES Good compression?	NO Loose spark plug. Excess wear on cylinder, piston, rings. Valves not seating.	Tighten and re-test. Consult with an authorized servicing dealer.
YES Does the tank contain fresh fuel of the proper grade?	NO Fuel incorrect, stale or contaminated; mixture incorrect.	Refill with fresh, clean unleaded gasoline with a pump octane of 87 or higher mixed with a 2-cycle air cooled mixing oil that meets or exceeds ISO-L-EGD and/or JASO FC classified oils at 50:1 gasoline/oil ratio.
YES Is fuel visible and moving in the return line when priming?	NO Check for clogged fuel filter and/or vent. Priming pump not functioning properly.	Replace fuel filter or vent as required; restart. Consult with an authorized servicing dealer.
YES Is there spark at the spark plug wire terminal?	NO The ignition switch is in "O" (OFF) position. Shorted ignition ground. Faulty ignition unit.	Move switch to "I" (ON) position and restart. Consult with an authorized servicing dealer.
YES Check the spark plug.	If the plug is wet, excess fuel may be in the cylinder. The plug is fouled or improperly gapped. The plug is damaged internally or of the wrong size.	Crank the engine with the plug removed, reinstall the plug and restart. Clean and regap the plug to 0.024 - 0.028 inch (0.6 - 0.7 mm). Restart. Replace the plug with an NGK CMR5H or equivalent resistor type spark plug of the correct heat range. Set spark plug electrode gap to 0.024 - 0.028 inch (0.6 - 0.7 mm).

LOW POWER OUTPUT

What To Check	Possible Cause	Remedy
Is the engine overheating?	Operator is overworking the unit. Carburetor mixture is too lean. Improper fuel ratio. Fan, fan cover, cylinder fins dirty or damaged. Carbon deposits on the piston or in the muffler.	Shorten trimmer line. Cut at a slower rate. Consult with an authorized servicing dealer. Refill with fresh, clean unleaded gasoline with a pump octane of 87 or higher mixed with a 2-cycle air cooled mixing oil that meets or exceeds ISO-L-EGD and/or JASO FC classified oils at 50:1 gasoline/oil ratio. Clean, repair or replace as necessary. Consult with an authorized servicing dealer.
Engine is rough at all speeds. May also have black smoke and/or unburned fuel at the exhaust.	Clogged air cleaner element. Loose or damaged spark plug. Air leakage or clogged fuel line. Water in the fuel. Piston seizure Faulty carburetor and/or diaphragm. Valve clearance set incorrectly.	Service the air cleaner element. Tighten or replace. Repair or replace filter and/or fuel line. Replace the fuel. See page 10. Consult with an authorized servicing dealer. Adjust valves. See page 16.
Engine is knocking.	Overheating condition. Improper fuel. Carbon deposits in the combustion chamber. Valve clearance set incorrectly.	Consult with an authorized servicing dealer. Check fuel octane rating; check for presence of alcohol in the fuel (page 10). Refuel as necessary. Consult with an authorized servicing dealer. Adjust valves. See page 16.

Troubleshooting Guide (continued)

ADDITIONAL PROBLEMS

Symptom	Possible Cause	Remedy
Poor acceleration.	Clogged air filter. Clogged fuel filter. Lean fuel/air mixture. Idle speed set too low.	Clean the air filter. Replace the fuel filter. Consult with an authorized servicing dealer. Adjust: 3,000 (± 300) RPM (min^{-1})
Engine stops abruptly.	Switch turned off. Fuel tank empty. Clogged fuel filter. Water in fuel. Shorted spark plug or loose terminal. Ignition failure. Piston seizure.	Reset the switch and and restart. Refuel. See page 10. Replace fuel filter. Drain; replace with clean fuel. See page 10. Clean and replace spark plug, tighten the terminal. Replace the ignition unit. Consult with an authorized servicing dealer.
Engine difficult to shut off.	Ground (stop) wire is disconnected or switch is defective. Overheating due to incorrect spark plug. Overheated engine.	Test and replace as required. Idle engine until cool. Clean and regap the plug to 0.024 - 0.028 inch (0.6 - 0.7 mm). Correct plug: NGK CMR5H or equivalent resistor type spark plug of the correct range. Idle engine until cool.
Top of engine is getting dirty and oily.	Valve cover is leaking.	Replace valve cover gasket.
Cutting attachment rotates at idle.	Engine idle too high. Broken clutch spring or worn clutch spring boss. Loose attachment holder.	Set Idle: 3,000 (± 300) RPM (min^{-1}) Replace spring/shoes as required, check idle speed. Inspect and re-tighten holders securely.
Engine will not idle down.	Engine idle set too high. Engine has an air leak.	Set Idle: 3,000 (± 300) RPM (min^{-1}) Consult with an authorized servicing dealer.

ADDITIONAL PROBLEMS

Symptom	Possible Cause	Remedy
Excessive vibration.	Warped or damaged cutting attachment. Loose gearcase. Bent main shaft/worn or damaged bushings. Trimmer line not wound properly on spool.	Inspect and replace attachment as required. Tighten gearcase securely. Inspect and replace as necessary. Rewind trimmer line.
Cutting attachment will not rotate.	Shaft not installed in powerhead or gearcase. Broken shaft. Damaged gearcase.	Inspect and reinstall as required. Consult with an authorized servicing dealer.

The following statement only applies to United States and its territories

Shindaiwa Corporation
Federal Emission Design And Defect Limited Warranty
Utility And Lawn And Garden Engines

Shindaiwa Corporation warrants to the initial purchaser and each subsequent owner, that this utility equipment engine (herein engine) is designed, built and equipped to conform at the time of initial sale, to all applicable regulations of the U.S. Environmental Protection Agency (EPA), and that the engine is free of defects in materials and workmanship that would cause this engine to fail to conform with EPA regulations during its warranty period. This emission warranty is applicable in all States, except the State of California.

For parts listed under PARTS COVERED, the dealer authorized by Shindaiwa Corporation will, at no cost to you, make the necessary diagnosis, repair, or replacement of any defective emission-related component to ensure that the engine complies with applicable U.S. EPA regulations.

MANUFACTURERS WARRANTY COVERAGE

When sold within the U.S., this engine's emission control system is warranted for a period of two (2) years from the date this product is first delivered to the original retail purchaser.

OWNER'S WARRANTY RESPONSIBILITIES

As the engine owner, you are responsible for the performance of the required maintenance listed in your owner's manual. Shindaiwa Corporation recommends that you retain all receipts covering maintenance on your engine, but Shindaiwa Corporation cannot deny a warranty claim solely for the lack of receipts or for your failure to ensure the performance of all scheduled maintenance.

As the engine owner, you should however be aware that Shindaiwa Corporation may deny your warranty coverage if your engine or a part has failed due to abuse, neglect, improper maintenance or unapproved modifications.

You are responsible for presenting your engine to the nearest dealer authorized by Shindaiwa Corporation when a problem exists.

If your Shindaiwa Dealer is unable to answer questions regarding your warranty rights and responsibilities, you should then contact your Shindaiwa Distributor.

For the name and telephone number of the Shindaiwa Distributor in your area, please call Shindaiwa Inc. at (503) 692-3070 between the hours of 8:00 AM and 5:00 PM Pacific Standard Time.

PARTS COVERED

Listed below are the parts covered by the Federal Emission Design and Defect Warranty. Some parts listed below may require scheduled maintenance and are warranted up to the first scheduled replacement of that part. The warranted parts include:

1. Carburetor Internal Components
 - Valve Assembly-throttle, Jet, Metering Diaphragm
2. Ignition System Components
 - Ignition Coil
 - Flywheel Rotor

The emission control system for your particular Shindaiwa engine may also include certain related hoses and connectors.

LIMITATIONS

The Federal Emission Design and Defect Warranty shall not cover any of the following:

- (a) conditions resulting from tampering, misuse, improper adjustment (unless they were made by the dealer or service center authorized by Shindaiwa

Corporation during a warranty repair), alteration, accident, failure to use the recommended fuel and oil, or not performing required maintenance services,

- (b) the replacement parts used for required maintenance services,
- (c) consequential parts used for required maintenance services,
- (d) diagnosis and inspection fees that do not result in eligible warranty service being performed, and
- (e) any non-authorized replacement part, or malfunction of authorized parts due to use of non-authorized parts.

MAINTENANCE AND REPAIR REQUIREMENTS

You are responsible for the proper use and maintenance of the engine. You should keep all receipts and maintenance records covering the performance of regular maintenance in the event questions arise. These receipts and maintenance records should be transferred to each subsequent owner of the engine. Shindaiwa Corporation reserves the right to deny warranty coverage if the owner has not properly maintained the engine. Shindaiwa Corporation will not deny warranty repairs, however, solely because of the lack of repair, maintenance or failure to keep maintenance records.

MAINTENANCE, REPLACEMENT OR REPAIR OF EMISSION CONTROL DEVICES AND SYSTEMS MAY BE PERFORMED BY ANY REPAIR ESTABLISHMENT OR INDIVIDUAL; HOWEVER, WARRANTY REPAIRS MUST BE PERFORMED BY A DEALER OR SERVICE CENTER AUTHORIZED BY SHINDAIWA CORPORATION. THE USE OF PARTS THAT ARE NOT EQUIVALENT IN PERFORMANCE AND DURABILITY TO AUTHORIZED PARTS MAY IMPAIR THE EFFECTIVENESS OF THE EMISSION CONTROL SYSTEM AND MAY HAVE A BEARING ON THE OUTCOME OF A WARRANTY CLAIM.

If other than the parts authorized by Shindaiwa Corporation are used for maintenance replacements or for the repair of components affecting emission control, you should assure yourself that such parts are warranted by their manufacturer to be equivalent to the parts authorized by Shindaiwa Corporation in their performance and durability.

OBTAINING WARRANTY SERVICE

All repairs qualifying under this limited warranty must be performed by a dealer authorized by Shindaiwa Corporation

If any emission-related part is found defective during the warranty period, it is your responsibility to present the product to an authorized Shindaiwa dealer. Bring your sales receipts showing the date of purchase for this engine. The dealer authorized by Shindaiwa Corporation will perform the necessary repairs or adjustments within a reasonable amount of time and furnish you with a copy of the repair order. All parts and accessories replaced under this warranty become the property of Shindaiwa Corporation

To locate an authorized Shindaiwa dealer near you, contact your Shindaiwa Distributor. For the name and telephone number of the Shindaiwa Distributor in your area, please call Shindaiwa Inc. at (503) 692-3070 between the hours of 8:00 AM and 5:00 PM Pacific Standard Time.

THIS WARRANTY IS ADMINISTERED BY

Shindaiwa Inc.

11975 S.W. Herman Rd.

Tualatin OR. 97062

(503) 692-3070

shindaiwa

Shindaiwa Inc.

11975 S.W. Herman Rd.

Tualatin, Oregon 97062

Telephone: 503 692-3070

Fax: 503 692-6696

www.shindaiwa.com

Shindaiwa Corporation

6-2-11 Ozuka-Nishi

Asaminami-Ku, Hiroshima

731-3167, Japan

Telephone: 81-82-849-2220

Fax: 81-82-849-2481

©2007 Shindaiwa, Inc.

Part Number 81704

Revision 2/07

Shindaiwa is a registered trademark
of Shindaiwa, Inc.

Specifications subject to change without notice.

Shindaiwa

Shindaiwa Inc.
11975 S.W. Herman Rd.
Tualatin, Oregon 97062
Telephone: 503 692-3070
Fax: 503 692-6696
www.shindaiwa.com

Shindaiwa Corporation
6-2-11 Ozuka-Nishi
Asaminami-Ku, Hiroshima
731-3167, Japan
Telephone: 81-82-849-2220
Fax: 81-82-849-2481

©2007 Shindaiwa, Inc.
Numero 81704
Revision 2/07
Shindaiwa es una marca registrada de la empresa Shindaiwa, Inc.
Especificaciones sujetas a cambio sin previo aviso.

Shindaiwa Corporation Garantía limitada de defectos y diseño de emisiones federales Motores de uso general y para parques y jardines

- (a) Condiciones que resulten de una intervención no autorizada, un mal uso, un ajuste inapropiado (a menos de que los hubieran efectuado un distribuidor o un centro de servicio autorizado de Shindaiwa Corporation, en el curso de una reparación de garantía), una alteración, accidente, omisión en el uso del combustible y aceite recomendados o de una omisión en el cumplimiento de los servicios de mantenimiento requeridos,
- (b) Los repuestos usados para los servicios de mantenimiento requeridos,
- (c) Partes consecuenciales utilizadas para efectuar los servicios de mantenimiento requeridos,
- (d) Cuotas de diagnóstico e inspección que no resulten en servicios cubiertos por la garantía,
- (e) Todo repuesto no autorizado o la falla de partes autorizadas que pudieran deberse al uso de partes no autorizadas.

REQUISITOS DE MANTENIMIENTO Y REPARACIÓN

Usted es responsable del uso y mantenimiento correctos del motor. Usted deberá conservar todos los comprobantes y registros de mantenimiento que cubran la realización de mantenimiento regular en caso de que surjan preguntas. Estos comprobantes y los registros de mantenimiento deberán ser transferidos a cada propietario subsiguiente del motor. Shindaiwa Corporation se reserva el derecho a negar la cobertura de garantía si el propietario no ha mantenido correctamente el motor. Shindaiwa Corporation, sin embargo, no negará reparaciones bajo garantía por el solo hecho de no haberse efectuado reparaciones o mantenimiento o por la omisión de mantener registros de mantenimiento.

EL MANTENIMIENTO, REEMPLAZO O REPARACIÓN DE DISPOSITIVOS Y SISTEMAS DE CONTROL DE EMISIONES PUEDE SER REALIZADO POR CUALQUIER ESTABLECIMIENTO O PERSONA DEDICADOS A ELLO. SIN EMBARGO, LAS REPARACIONES CUBIERTAS POR LA GARANTIA DEBEN SER LLEVADAS A CABO POR UN DISTRIBUIDOR O CENTRO DE SERVICIO AUTORIZADO POR SHINDAIWA CORPORATION EL EMPLEO DE PIEZAS QUE NO SON EQUIVALENTES EN RENOVAMIENTO Y DURABILIDAD A LAS PIEZAS AUTORIZADAS PUEDE REDUCIR LA EFECTIVIDAD DEL SISTEMA DE CONTROL DE EMISIONES Y PUEDE AFECTAR EL RESULTADO DE UNA RECLAMACION DE GARANTIA.

Si se utilizaran piezas no autorizadas por Shindaiwa Corporation para reemplazos por mantenimiento o reparación de componentes que afecte el control de emisiones, se deberá asegurar que dichas piezas estén garantizadas por el fabricante como equivalentes a las piezas autorizadas por Shindaiwa Corporation en lo relativo al rendimiento y durabilidad.

SOLICITUDES DE SERVICIO DE GARANTIA

Toda reparación realizada conforme a los términos de esta garantía limitada deberá ser llevada a cabo por un distribuidor autorizado por Shindaiwa Corporation. Si cualquier pieza vinculada con las emisiones es encontrada defectuosa durante el periodo de garantía, es su responsabilidad presentar el producto a un distribuidor autorizado de Shindaiwa. Presente sus comprobantes de venta en los que aparezca la fecha de compra del motor. El distribuidor autorizado de Shindaiwa Corporation llevará a cabo las reparaciones o ajustes necesarios en un lapso razonable, suministrándole una copia de dicha orden de reparación. Todas las piezas y accesorios reemplazados bajo esta garantía pasarán a ser propiedad de Shindaiwa Corporation.

Para localizar a un agente de servicio Shindaiwa más cercano a usted, favor de ponerse en contacto con su distribuidor Shindaiwa. Para obtener el nombre y el número telefónico del distribuidor de Shindaiwa en su localidad, comuníquese con Shindaiwa Inc., al (503) 692-3070 de 8:00 a.m. a 5:00 p.m., hora del Pacífico.

ESTA GARANTIA ES ADMINISTRADA POR:

Shindaiwa Inc.
11975 S.W. Herman Rd.
Tualatin OR 97062
(503) 692-3070

Cuando este equipo se vende en E.E.U.U., el sistema de control de emisiones del mismo está garantizado por un periodo de 2 (dos) años a partir de la fecha en que el producto haya sido entregado por primera vez al comprador minorista original.

COBERTURA DE LA GARANTIA DEL FABRICANTE

Shindaiwa Corporation efectuará, sin costo para el propietario, los diagnósticos, reparaciones o reemplazos necesarios de cualquier componente defectuoso en relación con las emisiones para asegurar que el motor cumpla con las reglamentaciones de la EPA de E.E.U.U. aplicables.

Para las piezas listadas en PIEZAS CUBIERTAS, el Distribuidor autorizado por Shindaiwa Corporation para asegurar que el motor cumpla con las reglamentaciones de la EPA de E.E.U.U. durante el periodo de vigencia de la garantía. Esta garantía sobre normas de emisión rige para todos los estados, excepto para el Estado de California.

Shindaiwa Corporation garantiza al comprador inicial y a cada propietario siguiente, que este motor para equipos de uso general (de aquí en adelante motor) está diseñado, fabricado y equipado para cumplir, en el momento de la venta inicial, con todas los reglamentos vigentes de la Administración de Protección Ambiental de E.E.U.U. (EPA) y que no tiene defectos materiales ni de mano de obra que pudieran hacer que el motor no cumpla con las reglamentaciones de la EPA durante el periodo de vigencia de la garantía. Esta garantía sobre normas de emisión rige para todos los estados, excepto para el Estado de California.

PIEZAS CUBIERTAS
A continuación se listan las piezas cubiertas por la garantía de diseño federal de mantenimiento periódico y están garantizadas hasta el primer reemplazo programado de las mismas. Las partes garantizadas incluyen:

- Componentes internos del carburador
- Componentes del sistema de encendido
 - Armado y medición del chorro y el diáfragma
 - Bobina de encendido
 - Rotor del volante

El sistema de control de emisiones del motor Shindaiwa puede también incluir ciertas mangueras y conexiones afines.

LIMITACIONES

La garantía por diseño federal de emisiones y defectos no cubre nada de lo siguiente:

Síntoma	Posible Causa	Remedio
El motor se apaga abruptamente.	<div>El interruptor está en la posición de apagado.</div> <div>El tanque de combustible está vacío.</div> <div>Filtro de combustible obstruido.</div> <div>Agua en el combustible.</div> <div>Bujía defectuosa o terminal flojo.</div> <div>Falla en el sistema de encendido.</div> <div>Pistón trabado.</div>	<div>Fije el interruptor y vuelva a arrancar.</div> <div>Vuelva a llenar. Consulte página 10.</div> <div>Cambie el filtro de combustible</div> <div>Drene; cambie con combustible limpio.</div> <div>Consulte página 10.</div> <div>Limpie y cambie la bujía; Apriete el terminal</div> <div>Reemplace el sistema de encendido.</div> <div>Consulte con su agente de servicio autorizado.</div>
Se hace difícil apagar el motor.	<div>La conexión a tierra está desconectada, o el interruptor está defectuoso.</div> <div>Sobrecalentamiento debido a bujía incorrecta.</div> <div>Motor sobrecalentado.</div>	<div>Pruebe y reemplace como sea requerido.</div> <div>Ponga el motor en marcha mínima hasta que enfrie. Limpie y fije la holgura de la bujía a 0.024 – 0.028 pulgadas (0.6 – 0.7 mm). Bujía correcta: NGK CMR6H o su equivalente con resistencia al calor correcta.</div> <div>Marcha mínima hasta que enfrie.</div>
La parte superior del motor se está ensuciendo y engrasando.	<div>La tapa de la válvula está goteando.</div>	<div>Reemplace el empaque del colector de las válvulas.</div>
El accesorio de corte gira con el motor en marcha mínima.	<div>Marcha mínima ajustada muy alta.</div> <div>Resorte del embrague está quebrado o el resorte patrón del embrague está gastado.</div> <div>El soporte del accesorio está flojo.</div>	<div>Fije la marcha mínima: 3,000 rpm (±300) rpm (min⁻¹)</div> <div>Cambie los resortes/zapatillas como sea necesario, revise la marcha mínima.</div> <div>Inspeccione y apriete seguramente los soportes</div>
El motor no baja a marcha mínima.	<div>Marcha mínima ajustada muy alta.</div> <div>El motor tiene una fuga de aire.</div>	<div>Fije la marcha mínima: 3,000 rpm (±300) rpm (min⁻¹)</div> <div>Consulte con su agente de servicio autorizado.</div>
Síntoma	Posible Causa	Remedio
El accesorio para cortar está dañado o doblado.	<div>La caja de engranage está floja.</div> <div>El eje principal está doblado/forros están dañados o gastados.</div> <div>La línea de corte no enrolla propiamente en el carrete.</div>	<div>Inspeccione y cambie el accesorio para cortar como sea necesario.</div> <div>Apriete la caja de engranage firmemente.</div> <div>Inspeccione y cambie como sea necesario.</div> <div>Rebobine el cable nylon.</div>
Vibración excesiva.	<div>El eje no está instalado en el tren motriz o en la caja de cambios.</div> <div>Eje quebrado.</div> <div>Caja de engranage dañada.</div>	<div>Inspeccione y vuelva a instalar como sea necesario.</div> <div>Consulte con su agente de servicio autorizado.</div>
El cortador no gira.		


PROBLEMAS ADICIONALES

EL MOTOR NO ARRANCA

Recomendación

Que Revisar

Posible Causa

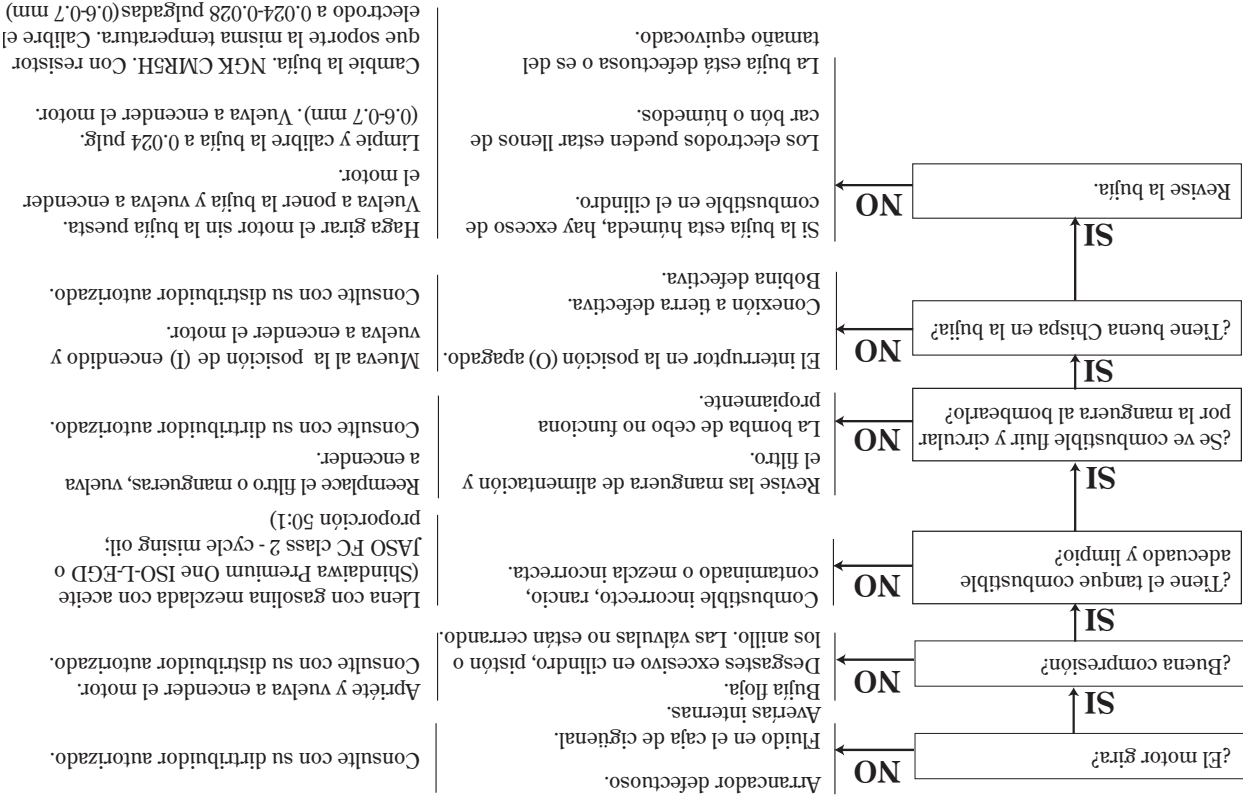


BAJA POTENCIA

Que Revisar

Posible Causa

Remedio

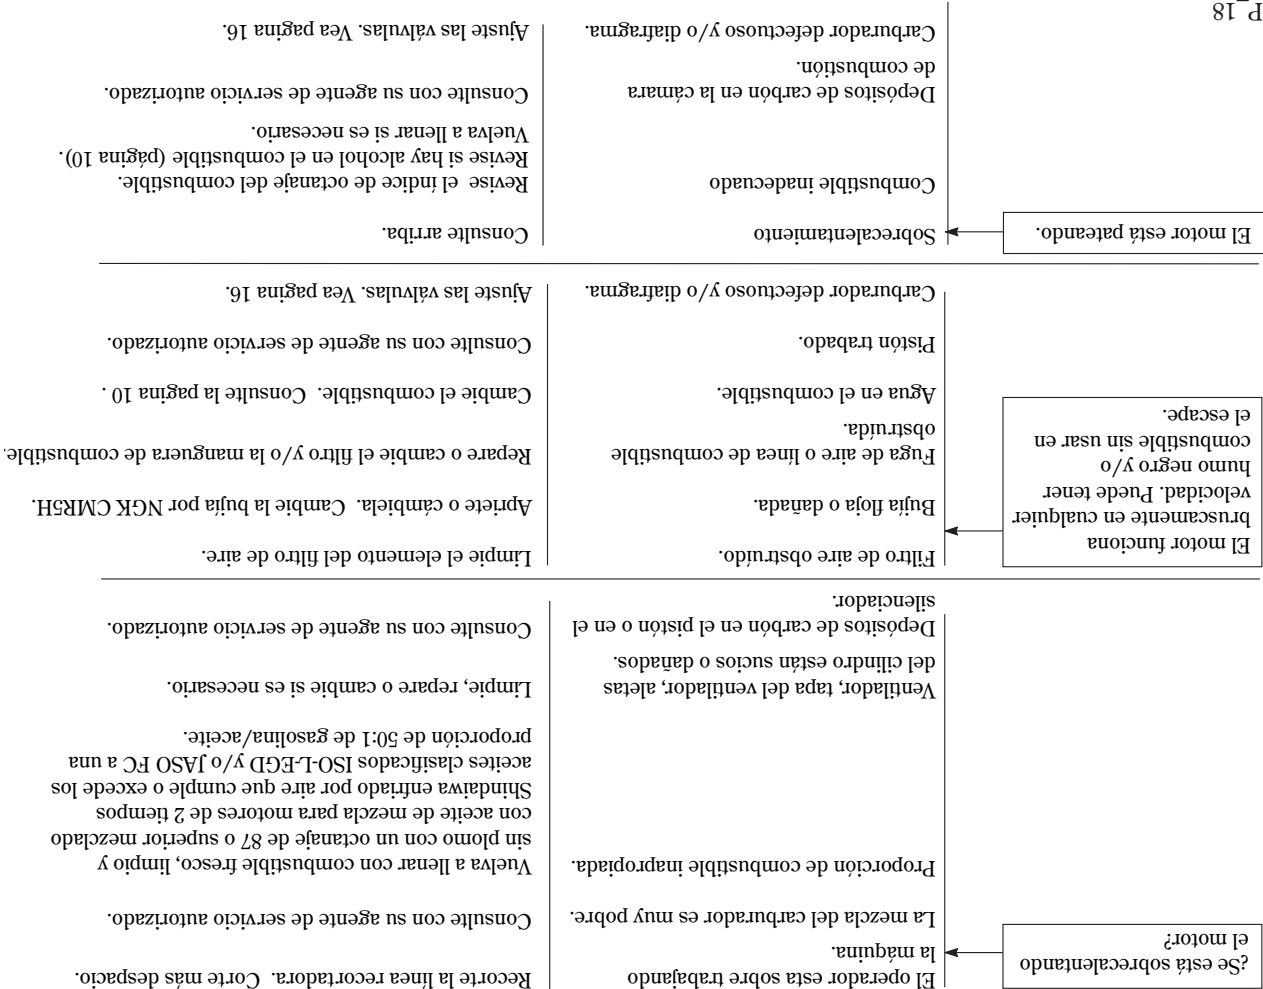

Cada vez que la máquina no va a ser usada por 30 días o más, siga los siguientes procedimientos para preparar su almacenamiento:

- Limpie las partes externas y aplique una capa ligera de aceite a todas las superficies metálicas.
- Drene todo combustible en el tanque.

¡IMPORTANTE!

Todo combustible almacenado debe estar estabilizado con un estabilizador de combustible tal como STA-BIL™, al menos que use aceite **Shindaiwa ONE** con estabilizador de combustible.

¡PRECAUCIÓN!

Gasolina almacenada en el carburador por períodos largos puede causar un arranque duro y puede conducir a un aumento en costo de servicio y mantenimiento.

- Retire el resto del combustible en las tuberías de combustible y carburador.
- 1. Empuje la bombilla de cebado hasta que el combustible deje de pasar.
- 2. Arranque y mantenga prendido el motor hasta que pare de funcionar.
- 3. Repita los pasos 1 y 2 hasta que el motor ya no arranque.

- Retire la bujía y vierta aproximadamente 1/4 de onza de aceite de mezcla para motores de 2 tiempos en el cilindro a través del agujero de la bujía. Lentamente jale el arrancador 2 ó 3 veces para que el aceite se aplique uniformemente en el interior del motor. Reinstale la bujía.
- Antes de almacenar la máquina, repare o cambie cualquier pieza dañada o gastada.
- Retire el elemento del filtro de aire y límpielo minuciosamente con agua y jabón. Deje que seque y vuelva a ensamblar el elemento.
- Almacene la máquina en un sitio limpio y libre de polvo.

Afilado de Discos

Cuando los bordes de la cuchilla pierdan su filo, pueden ser afilados rápidamente con una lima. Para mantener la cuchilla balanceada, todos los bordes deben ser afilados uniformemente.

Disco Shindaiwa Tornado™

Para afilar los dientes de corte de un disco shindaiwa Tornado™, use una lima redonda de 7/32 pulgadas. Afíle el borde líder de cada diente hasta obtener un filo similar al de una hoja de afeitar. La superficie superior de cada diente debe tener una inclinación de 30 grados. Consulte la figura 33.



Figura 33

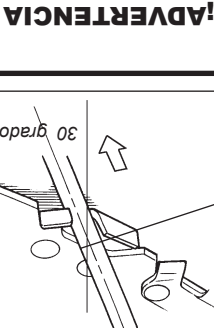


Figura 33

¡ADVERTENCIA!

Afile solamente los dientes de corte. NO altere de ninguna forma el contorno del disco.

 


Figura 34

Discos de Dientes Múltiples

Use una lima redonda para mantener un radio de 0.04 a 0.06 pulgadas (1 a 1.5mm) en la base de cada diente. Los dientes deben quedar igualmente descentrados por cada lado. Consulte la figura 34.

Cada 139/150 horas o Mantenimiento

Darle mantenimiento después de las primeras 139 horas de operación, después darle mantenimiento cada 150 horas.

■ La cámara de combustión debe de ser descarbonizado y la separación de la válvula ajustada. Es recomendable

que esto sea hecho por uno técnico entrenado por Shindaiwa.

■ Reemplace la bujía anualmente: Use solamente NGK CMR5H o una bujía equivalente con resistencia al calor correcta. Fije la holgura del electrodo de la bujía a 0.6 – 0.7 mm (0.024 – 0.028 pulgadas)


Ajuste de Válvula

1. Remueva la tapa del cilindro, la cubierta del balancín, y ajuste el pistón a compresión de TDC.

!PRECAUCIÓN!

■ El ajustar la válvula incorrectamente puede causar dificultad al arrancar y/o dañar la máquina. Vea el manual de servicio del C-4 para instrucciones completas de cómo ajustar las válvulas y las especificaciones correctas de torsión.

■ Si no esta familiarizado con este motor o no se siente seguro del proceso, consulte con un agente autorizado Shindaiwa.

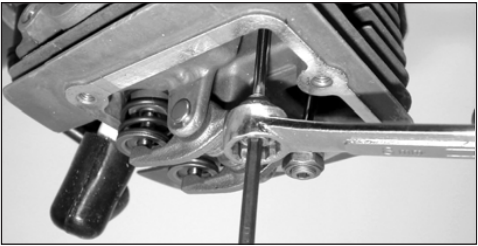

6. Vuelva el motor varias veces y vuelva a ajustar la compresión a TDC. Vuelva a chequear con el calibrador apropiado para asegurarse que el espacio de ajuste no cambió como resultado de haber apretado la contratuercas. Vuelva a ajustarlo si es necesario

7. Reemplace la cubierta del balancín para asegurarse de que esté sellado apropiadamente e instale la tapa.

!IMPORTANTE!

Si la empaquetadura no está disponible y/o la usada no esta dañada, la usada puede volverse a usar. Nunca use empaquetaduras rotas o ¡dañadas!

Mantenimiento de la Maya Guardachispas

Si el motor se pone peroso o tiene baja potencia, revise y limpie la maya del guardachispas.


!ADVERTENCIA!

Nunca opere la unidad con un silenciador o guardachispas dañado o fallante! De lo contrario, puede ser un riesgo de incendio y podría también causar daños a sus oídos.

!IMPORTANTE!

Si nota acumulación excesiva de carbón, consulte con su centro de servicio autorizado Shindaiwa.

6. Vuelva a ensamblar el guardachispas, el silenciador y la tapa del motor en forma reversa al order de desensblaje.

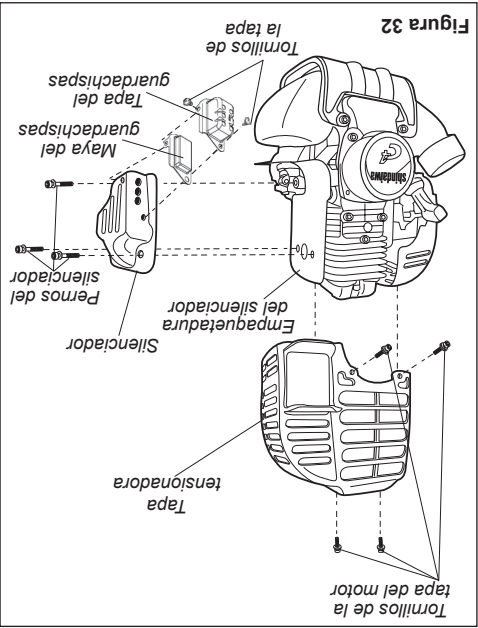

NOTA :

La NGK CMR5H también cumple con los requisitos de la regulación de electro mangeticos (EMC).

Mantenimiento Cada 10/15 Horas

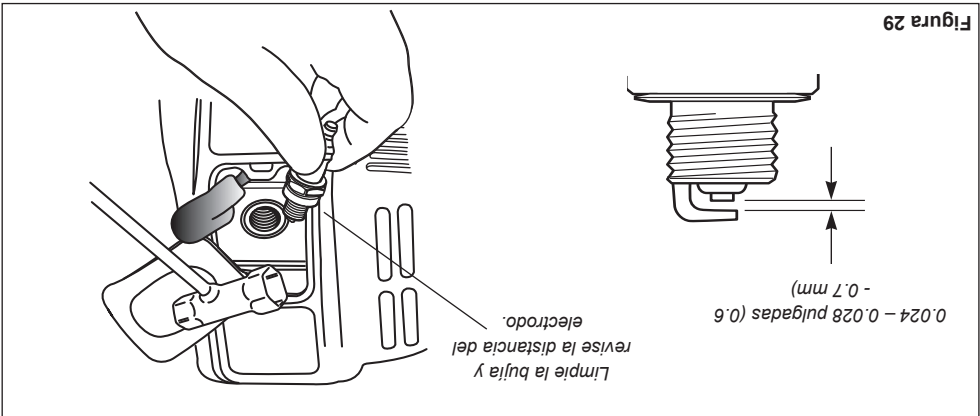


Figura 29

Mantenimiento Cada 50 Horas

Cada 50 horas de operación (más frecuentemente bajo condiciones sucias o polvorientas):

- Retire y limpie la tapa del cilindro y limpie la maleza y la suciedad en las aletas del cilindro.
- Retire el accesorio de corte, el soporte del accesorio de corte y el collar de la caja de engranajes. Retire la tuerca del alimentador del costado de la caja de engranajes e introduzca grasa nueva a la caja hasta que la grasa usada salga. Use solamente grasa a base de litio, tal como grasa Shindaiwa para Caja de Engranes o su equivalente. Consulte la figura 30.
- Lubrique las estrías del eje principal.

- Use un gancho de alambre para extraer el filtro de combustible del tanque de combustible. Consulte la figura 31.

!PRECAUCIÓN!

Asegure de no perforar la tubería de combustible con la punta del gancho de alambre, pues esta línea es delicada y se puede dañar fácilmente.

Retire y reemplace el elemento del filtro. Antes de reinstalar el filtro, inspeccione la condición de todo los componentes del sistema de combustible (manguera de alimentación, manguera del ventilador, ventilador, tapa y tanque). Si descubre daños, quebraduras o deteriorización, retire la unidad de operación hasta que pueda ser inspeccionada o reparada por un técnico de servicio entrenado por Shindaiwa.

Cada 10 ó 15 horas de operación: Retire y limpie la bujía. Ajuste la distancia del electrodo a 0.024-0.28 pulgadas (0.6-0.7 mm). Si la bujía necesita ser reemplazada, use solamente una bujía NGK CMR5H o una bujía equivalente con resistencia al calor correcta. Consulte la figura 39.

NOTA :

La NGK CMR5H también cumple con los requisitos de la regulación de electro mangnéticos (EMC).

!PRECAUCIÓN!

Antes de retirar la bujía, limpie alrededor de la misma para evitar que entre polvo o suciedad a las partes internas del motor.

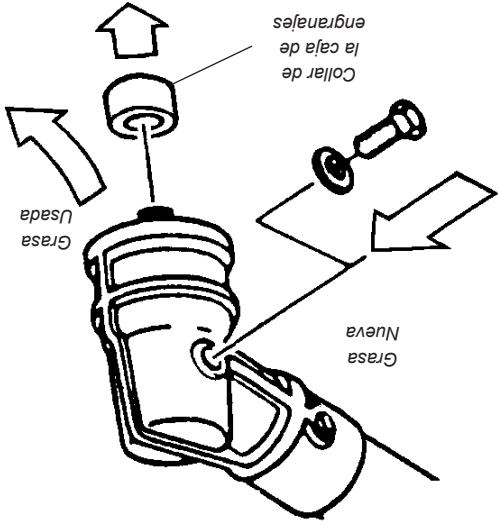


Figura 30

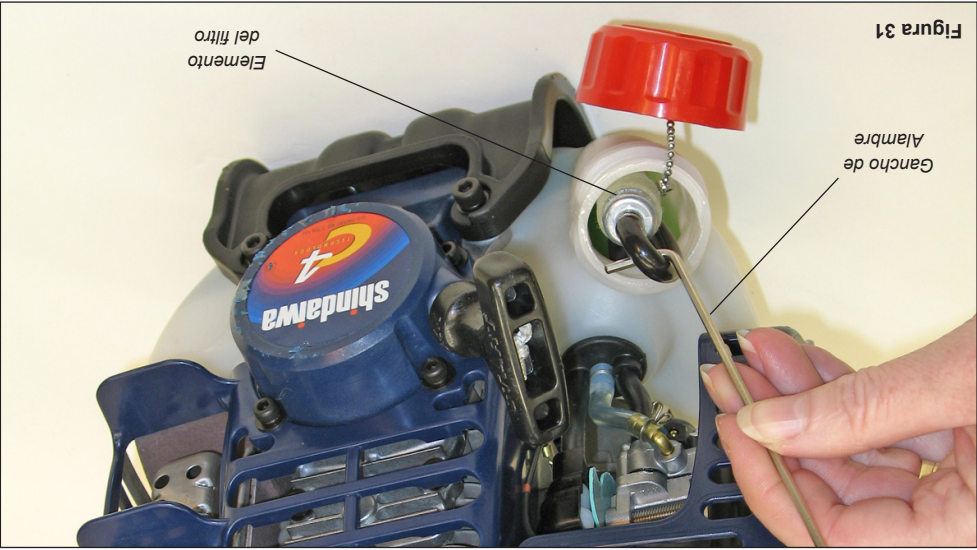


Figura 31

Mantenimiento General

¡IMPORTANTE!

EL MANTENIMIENTO, REEMPLAZO O REPARACION DE LOS SISTEMAS Y DISPOSITIVOS DE CONTROL DE EMISION PUEDEN SER EFECTUADOS POR CUALQUIER ESTABLECIMIENTO O INDIVIDUO, SIN EMBARGO, LAS REPARACIONES DE GARANTIA DEBEN SER EFECTUADAS POR SU CENTRO DE SERVICIO O DISTRIBUIDOR AUTORIZADO POR SHINDAIWA CORPORATION EL USO DE PARTES QUE NO SON EQUIVALENTES EN RENDIMIENTO Y DURABILIDAD A LAS PARTES AUTORIZADAS PUEDEN AFECTAR LA EFECTIVIDAD DE SU SISTEMA DE CONTROL DE EMISION Y PUEDE INFLUENCIAR EL RESULTADO DE SU RECLAMO DE GARANTIA.

Cuchillas

Mantenga los discos afilados y revise la condición del disco frecuentemente. Si el rendimiento de un disco cambia repentinamente, pare el motor y revise el disco en busca de rajaduras u otro daño. Reemplace el disco dañado INMEDIATAMENTE!

Mantenimiento Diario

Antes de cada día de trabajo,

efectúe lo siguiente:

- Retire toda suciedad y despojo del motor, revise las aletas de enfriamiento y el filtro de aire y límpielos de ser necesario.

Mantenimiento Cada 10 Horas

(Más frecuentemente en condiciones rigurosas)

1. Extraiga la cubierta del limpiador de aire alojando los dos tornillos de mano. Consulte la Figura 28A.
2. Inspeccione el elemento del filtro de aire. Si el elemento está dañado o deformado reemplácelo por uno nuevo. Consulte la Figura 28B.
3. Limpie el prefiltro con agua y jabón. Déjelo secar antes de volver a instalarlo.
4. Revise el elemento del limpiador de aire. Si está deformado o dañado, reemplácelo por uno nuevo. Consulte la Figura 28B.
5. Golpee al filtro suavemente sobre una superficie dura para sacar la suciedad del elemento o use aire comprimido desde el interior para soplar la suciedad hacia afuera del elemento del filtro de aire.

!ADVERTENCIA!

Antes de efectuar mantenimiento, reparación o limpieza de la máquina, cerciórese de que el motor y el accesorio de corte estén completamente detenidos. Desconecte el cable de bujía antes de efectuar servicio de mantenimiento.

!ADVERTENCIA!

Los repuestos no estándar puedan que no operen propiamente con su máquina y pueden causar daño y conducir a una lesión personal.

NOTA:

El usar repuestos no estándar podría invalidar su garantía Shindaiwa.

Silenciador

Esta máquina nunca debe ser operada con un guardachispas o silenciador defectuoso o faltante. Cerciórese de que el silenciador esté bien asegurado y en buena condición. Un silenciador usado o dañado es un riesgo de incendio y puede causar la pérdida de audición.

Bujía

Mantenga la bujía y las conexiones de cable apretadas y limpias.

Sujetadores

Cerciórese de que las tuercas, pernos y tornillos (a excepción de los tornillos de ajuste del carburador) estén apretados.

!ADVERTENCIA!

- Nunca repare un disco dañado soldándolo, enderezándolo o modificando su forma. Una vez alterado, podría quebrarse en plena operación y ocasionar lesiones personales serias.
- Los discos de corte no son intercambiables entre las bordeadoras o desmalezadoras. El uso de cualquiera unidad con discos o accesorios no aprobados para la respectiva unidad pueden ser peligrosos y ocasionar lesiones graves.

- Cuidadosamente, retire cualquier acumulación de suciedad o despojo del silenciador y del tanque de combustible. La acumulación de suciedad en dichas áreas puede ocasionar el sobrecalentamiento del motor, inducir el gasto prematuro o crear un riesgo de incendio.

- Revise que no falten tornillos y que no estén flojos. Cerciórese de que el accesorio de corte esté firmemente asegurado.
- Revise la máquina entera en busca de goteo de combustible o grasa.



Figura 28A

- ¡IMPORTANTE!**
- Dirija la corriente de aire sólo hacia la cara interior del filtro.
6. Instale el elemento del filtro, prefiltro y cubierta en el orden inverso en que los sacó.

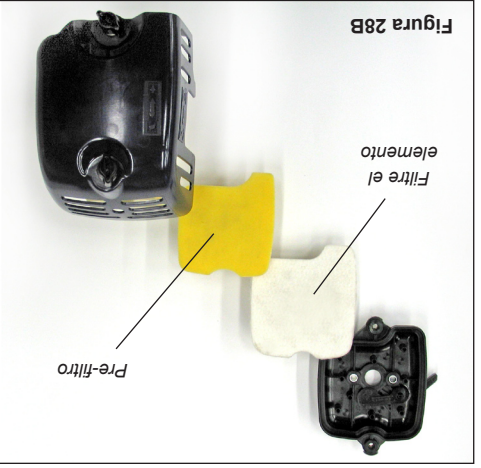


Figura 28B

¡PRECAUCIÓN!

Nunca opere la máquina si el limpiador de aire está dañado o falta.


¡ADVERTENCIA!
Antes de trabajar con una unidad equipada con un disco, siempre inspeccione y limpie los objetos en el área que puedan interferir o dañar el disco.
■ NUNCA use un disco cerca de veredas, cercas, edificios u otros objetos que puedan causar lesiones o daños.
■ NUNCA use un disco para ningún otro propósito aparte del cual ha sido diseñado.
■ Cuando golpee un objeto sólido con un disco, siempre pare el motor y cuidadosamente inspeccione el disco en busca de daños. NUNCA OPERE LA DESMALEZADORA CON UN DISCO DAÑADO !
■ Una unidad equipada con un disco debe estar equipada con un mango tipo bicicleta, así también como con un ármes o correa.
■ SIEMPRE cerciore que el protector del accesorio de corte esté propiamente instalado antes de operar la unidad.

El disco gira en dirección contraria a las agujas del reloj. Para máximo rendimiento y para reducir el ser golpeado por despojos, mueva el disco de derecha a izquierda mientras avanza en su trabajo. Ubique el disco de tal manera que los cortes se realizen entre las 8 horas y las 10 horas (agujas de un reloj). NO CORTE entre las 10 horas y 5 horas.

¡ADVERTENCIA!
NO USE discos de corte de dos dientes o discos de cuatro dientes no aprobados por shindaiwa con su desmalezadora.

Operando Unidades con una Cuchilla

¡ADVERTENCIA!
Al efectuar cortes verticales, nunca permita que el disco sobrepase la altura de su cintura.

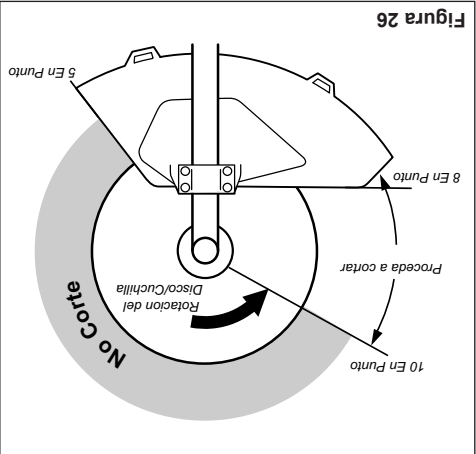

Rebote de Disco
El rebote de disco es un movimiento repentino de lado a lado o hacia atrás de la desmalezadora. Tal movimiento puede ocurrir cuando el disco se enreda o coje un objeto tal como ramas o troncos de árbol. ESTE CONSTANTEMENTE ALERTA DEL REBOTE DE DISCO Y PROTEJASE CONTRA SUS EFECTOS !

Mango tipo bicicleta para desmalezadora
El mango tipo bicicleta para desmalezadora ayuda a prevenir que el operador se mueva hacia adelante o que la unidad se mueva hacia atrás, impidiendo así el contacto del cuerpo con el accesorio de corte. SIEMPRE MANTENGA EL MANGO ASEGUADO EN SU SITIO EN LA UNIDAD !

Correa de Hombro Para Desmalezadora
La correa de hombro ofrece protección adicional contra los rebotes de la cuchilla. Adicionalmente, brinda un gran soporte y comodidad para una operación segura y eficiente. Cuando use una C2510 con cuchilla, cerciore que el mango y la correa de hombro estén ajustados a la talla del operador que usa la unidad.



Velocidades de Operación del Motor
Opere el motor a máxima potencia mientras corte. Para mayor eficiencia de combustible, suelte el acelerador cuando ocurra un corte. Para evitar posibles daños al motor, no permita que la desmalezadora funcione a altas velocidades sin carga.
■ Evite operar el accesorio a velocidades bajas. De lo contrario, puede conducir a un desgaste rápido del embrague. Adicionalmente, la operación a baja velocidad tiende a hacer que el cabezal de corte se enrede con césped y despojos.

Verifique la Condición de la Unidad

NUNCA opere la unidad sin el protector del accesorio de corte o sin equipo de protección.



¡ADVERTENCIA!

El protector del accesorio de corte o equipo de protección no garantiza protección contra rebotes. USTED SIEMPRE DEBE PROTEGERSE DE DESPOJOS VOLANTES!

Use solamente repuestos y accesorios autorizados por Shindaiwa en su podadora

Correa de Hombro C2510 ¡IMPORTANTE!


Ajuste la correa de hombro o árnes de tal forma que la almohadilla descansa cómodamente sobre los lados de los hombros y que la trayectoria de corte del accesorio de corte esté paralelo al suelo. Asegure que todo los ganchos y dispositivos de ajuste estén asegurados.




¡ADVERTENCIA!

Siempre use un árnes cuando opera esta unidad con un disco. El usar un árnes le con la desmalezadora le permite mantener el control necesario de la unidad y también reduce la fatiga durante largas horas de operación. Vea la figura 23.

Shindaiwa. No haga modificaciones a la unidad sin la aprobación escrita de Shindaiwa, Inc.
SIEMPRE cerciórese de que el accesorio de corte esté propiamente instalado y firmemente apretado antes de usar.
NUNCA use un accesorio de corte rajado o doblado, reemplácelo con uno útil.
SIEMPRE cerciórese de que el cabezal encaje propiamente dentro del soporte. Si un cabezal propiamente instalado vibra, reemplácelo por uno nuevo y pruebe.

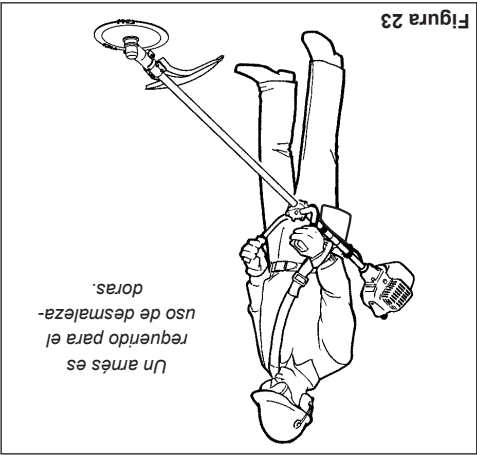

Árnes Doble Para Los Dos Hombros(Accesorio opcional)
Ajuste el árnes de tal forma que la almohadilla descansa cómodamente sobre los lados de los hombros y que la trayectoria del disco este paralelo al suelo. Asegúrese de que todo los ganchos y dispositivos de ajuste estén asegurados.

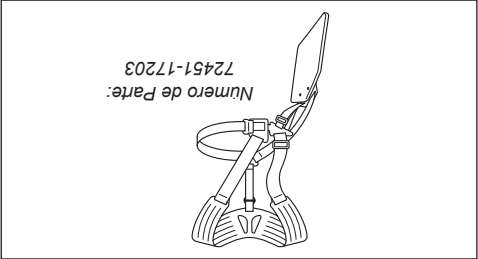

Corte de Césped – Máquinas Equipadas con Cabezal de Corte

NOTA:
Herramientas adicionales pueden ser requeridas para montar los cabezales de Línea Fija o de cuchillas flotantes.

¡PRECAUCIÓN!
No presione el cable de nylon contra árboles, cercas de alambre o cualquier otro material que pueda atascar o romper el cable.

Velocidades de Operación del Motor
Opere la máquina a aceleración máxima cuando corte césped.

¡PRECAUCIÓN!
Operación a bajas revoluciones por minuto puede conducir a la falla prematura del embrague.

¡PRECAUCIÓN!
Operación a bajas revoluciones puede conducir a la falla prematura del embrague.

- **Semi-Automático:** La línea de corte es indexada cuando el operador toca el suelo con el cabezal de corte durante el uso.
- **Manual:** El operador mide manualmente la línea con la recortadora de césped y añadir manualmente nuevos largos de línea de corte.
- **Cuchilla Flotante:** Este dispositivo, diseñado para cortar mala hierba o maleza ligera, incluye tres cuchillas de nylon atornilladas al cabezal a través de pivotes.


NOTE:

Su unidad Shindaiwa pueda que este equipada con uno de varios modelos de cabezales de corte de Shindaiwa, cada uno con características para aplicaciones específicas y/o requisitos operacionales.


NOTE:

Para la operación adecuada, consulte siempre las instrucciones incluidas en el cabezal de corte. Entre los modelos de cabezales de corte disponibles se incluyen:

Recorte y Podado de Césped

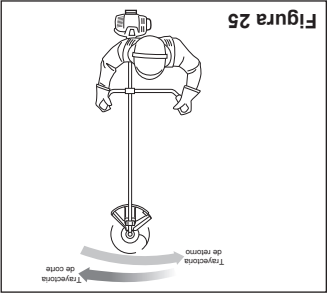

Bordes

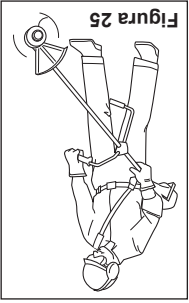

Incline el mango más o menos a 100° hacia la izquierda (desde la posición horizontal) y avance hacia adelante, sosteniendo la podadora verticalmente como se demuestra en la figura 25.

SIEMPRE pare el motor inmediatamente y revise en busca de daños si golpea un objeto extraño o si la unidad se enreda. No opere con equipo dañado o quebrado.

NUNCA permita que el motor funcione a altas revoluciones sin carga. De lo contrario, podría dañar el motor.

NUNCA use la máquina con sujetadores o soportes de accesorios desgastados o dañados.

¡ADVERTENCIA!
El accesorio de corte pueda que gire cuando encienda el motor!

¡ADVERTENCIA!
Nunca arranque el motor desde la posición de operación.


- Cuando arranca el motor... Después de que arranque el motor, permita que caliente en marcha mínima por 2 ó 3 minutos antes de usar la máquina.
- Después de que caliente el motor, levante la máquina y asegure el arnés si así está equipada. Consulte la página 12.
- Adelantando el acelerador hace que el accesorio de corte gire más rápido; liberando el acelerador permite que el motor regrese a marcha mínima, la velocidad mínima del carburador debe ser ajustada. (Consulte "Ajuste de Marcha Mínima" a continuación)

6. Cuando arranque el motor, mueva despacio la palanca del cebador a la posición "OPEN" (abierto). Consulte la figura 16. (Si el motor para después del arranque inicial, cierre la palanca del cebador y vuelva arrancar).




7. Operando el acelerador automático- camente desenganchará la marcha mínima.
- ¡IMPORTANTE!**
Si el motor falla en arrancar después de varios intentos con la palanca del cebador en posición cerrada, puede que el motor esté ahogado con combustible. Si esto se sospecha, mueva la palanca del cebador a la posición abierta y repetidamente jale el arrancador recular para remover el exceso de combustible y para arrancar el motor. Si aún falla en arrancar el motor, consulte el guía diagnóstico de este manual.

Parada del Motor

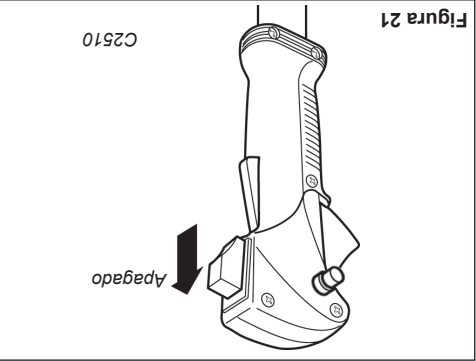

Ponga el motor en marcha mínima por dos o tres minutos antes de apagarlo, luego deslice el interruptor de ignición a la posición "O" (motor apagado)

Ajuste de Marcha Mínima del Motor

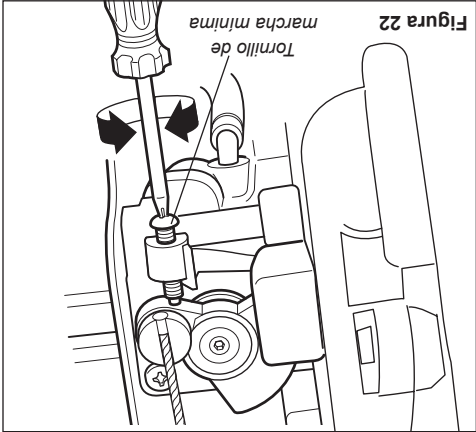

El motor debe retornar a marcha mínima cuando la palanca del acelerador es liberada. La marcha mínima es ajustable y debe ser suficientemente mínima para permitir que el embrague del motor libere el accesorio de corte.

Ajuste de Marcha Mínima

¡ADVERTENCIA!
El accesorio de corte NUNCA debe girar en marcha mínima! Si la marcha mínima no puede ser ajustada por el procedimiento descrito aquí, entonces devuelva la podadora a su distribuidor Shindaiwa para inspección.

1. Coloque la podadora en el suelo, luego encienda el motor y déjelo funcionar en marcha mínima durante 2 ó 3 minutos hasta que caliente.
2. Si el accesorio de corte gira mientras el motor está en marcha mínima, reduzca la marcha mínima, girando el tornillo de ajuste de marcha mínima en el sentido contrario a las agujas del reloj. Consulte la figura 22.
3. Si tiene un tacómetro disponible, la marcha mínima se debe ajustar a 3,000 RPM (±300) RPM (min⁻¹).
4. Los ajustes de mezcla de carburador son preajustados en la fábrica y no pueden ser cambiados en el campo.

PRECAUCIÓN!

Algunas gasolinas contienen alcohol como un oxigenante. Combustibles oxigenados pueden aumentar la temperatura del motor durante su funcionamiento. Bajo ciertas condiciones, combustible con alcohol puede reducir la calidad lubricante de algunos aceites de mezcla. Nunca use ningún combustible que contenga más de 10% de alcohol por volumen! Aceites genéricos y algunos aceites para motores fuera de borda pueden no sean para el uso en motores de C4 de alto rendimiento, y no deben ser usados en su motor Shindaiwai

Llenando el Tanque de Combustible



¡ADVERTENCIA!

Disminuya el riesgo de incendios!

- Pare el motor antes de volver a llenar el tanque.
- Siempre deje enfriar el motor antes de volver a llenar el tanque!
- Limpie todo derrame de combustible y aleje el motor por lo menos 10 pies (3 metros) del depósito de combustible antes de volver a prender el motor!
- Nunca comience u opere esta máquina si existe una pérdida de combustible.
- Nunca encienda u opere esta máquina si el carburador, líneas de combustible y/o tapa de tanque o tanque de combustible se encuentran dañados.
- Nunca fume o encienda fuegos cerca del motor o del combustible!
- Nunca coloque material inflamable cerca del silenciador del motor!
- Nunca opere el motor sin antes comprobar que el silenciador y el guardachispas estén funcionando adecuadamente.

PRECAUCIÓN!

Este motor está diseñado solamente para funcionar con una mezcla de 50:1 de gasolina sin plomo y aceite de mezclar para motores de 2 tiempos. ISO-L-EGD o JASO FC. El uso de aceites de mezclar no autorizados puede conducir a excesos de depósitos de carbón.

■ Use solamente gasolina fresca, limpia y sin plomo, con índice de octanaje de 87 o superior.

■ Mezcle todo el combustible con aceite de mezclar para motores de 2 tiempos de mezclar por aire que cumpla o exceda aceites clasificados ISO-L-EDG y/o JASO FC a proporción de 50:1 gasolina/aceite.

¡IMPORTANTE!

- Ejemplos de cantidades de mezcla a proporción de 50:1
- 1 galón de gasolina por 2.6 onzas de aceite de mezclar.
 - 5 litros de gasolina por 100 ml de aceite de mezclar.

Mezcle solamente el combustible necesario para uso inmediato! De ser necesario almacenar el combustible por más de 30 días, y si no se está usando aceite con estabilizador de combustible, entonces el combustible debe ser tratado primero con un estabilizador como por ejemplo Stabil™. El Aceite Shindaiwai ONE es un aceite registrado de JASO FC clasificado y también cumple o excede los requisitos de rendimiento de ISO-L-EGD. Shindaiwai One es recomendado para el uso en todos los motores Shindaiwai de baja emisión. Shindaiwai One también incluye el estabilizador de combustible.


Arranque del motor

¡IMPORTANTE!

El encendido del motor está controlado por un interruptor de dos posiciones montado en el mango del acelerador indicado "I" (encendido o arranque) y "O" (apagado o pare).


1. Posicione la palanca del acelerador en marcha mínima haciendo lo siguiente:

- a. Depprima y sostenga la palanca del acelerador (hacia el manubrio)
- b. Apriete y sostenga la palanca del acelerador del acelerador.
- c. Depprima y sostenga el botón de la palanca del acelerador.
- d. Mientras deprime el botón, suelte el seguro de la palanca.

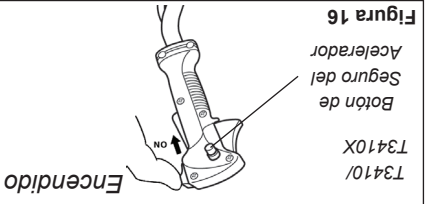


2. Deslice el interruptor hacia la posición "I" (motor encendido).
3. Presione la bombilla de cebado hasta que vea pasar combustible por el tubo de retorno transparente.

4. Posicione la palanca del cebador en la posición (cerrado) si el motor está frío.

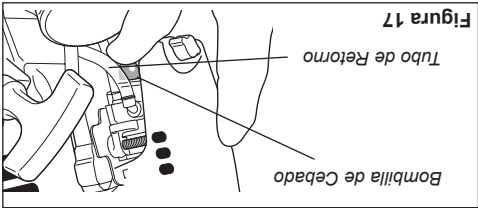

¡IMPORTANTE!

La bombilla de cebado solamente empuja combustible a través del carburador. Presionando repetidamente la bombilla de cebado no ahogará el motor con combustible.

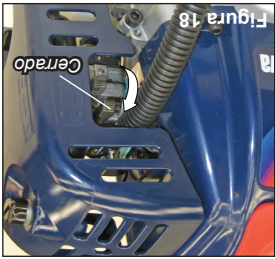

5. Mientras sostiene el tubo exterior firmemente con una mano, jale despacio la cuerda del arrancador recular hasta que sienta resistencia, luego jale rápidamente para arrancar el motor.

PRECAUCIÓN!

No jale el arrancador recular hasta el final de la cuerda. De lo contrario, puede dañar el arrancador.



Instalando la Cuchilla

Ponga la C2510 de cabeza, de tal forma que el perno del eje de la caja de engranajes este cara arriba y retire el perno del eje, el protector de perno y el soporte B del eje de la caja de engranajes.

1. Alinee la muesca en el Soporte A con la muesca correspondiente en el borde de la caja de engranajes y luego asegure temporalmente el eje de salida insertando la llave hexagonal a traves de ambas muescas. Consulte la figura 12.

2. Deslice el reten de seguridad fuera del centro. Consulte la figura 13.

3. Encaje la cuchilla sobre el reten de seguridad y luego centelo sobre el borde del Soporte A. Consulte la figura 14.

!PRECAUCIÓN!

Instale el disco de tal manera que su superficie impresa sea visible al operador cuando la unidad esté en la posición normal de operación.



El disco debe encajar en forma plana contra el borde del sujetador. La muesca de montaje del disco debe estar centrada sobre el patrón elevado en el sujetador de disco A.

NOTA:

Cuando instale ciertos discos, pueda que sea necesario retirar temporalmente el reten de seguridad.

4. Asegure el disco en su lugar centrando el reten de seguridad en el eje de salida. Consulte la figura 14.



!ADVERTENCIA!

Nunca opere la C2510 sin el reten de seguridad instalado.

¡IMPORTANTE!

El reborde en el sujetador B debe rodear completamente el reten de seguridad, y ambos sujetadores deben estar planos contra la superficie del disco.

- 5. Instale el sujetador B en el eje de salida. Consulte la figura 15. El reborde en el soporte debe cubrir completamente el reten de seguridad, y debe encajar apretadamente contra la cuchilla.
- 6. Instale el protector de perno y luego el perno de retencion de la cuchilla. Usando la llave de buija/distornillador combinado, apriete el perno firmemente en direccion contraria a las agujas del reloj.
- 7. Retire la llave hexagonal.

La C2510 debe estar ahora completamente ensamblada y lista para ser usada con una cuchilla.

Figura 15

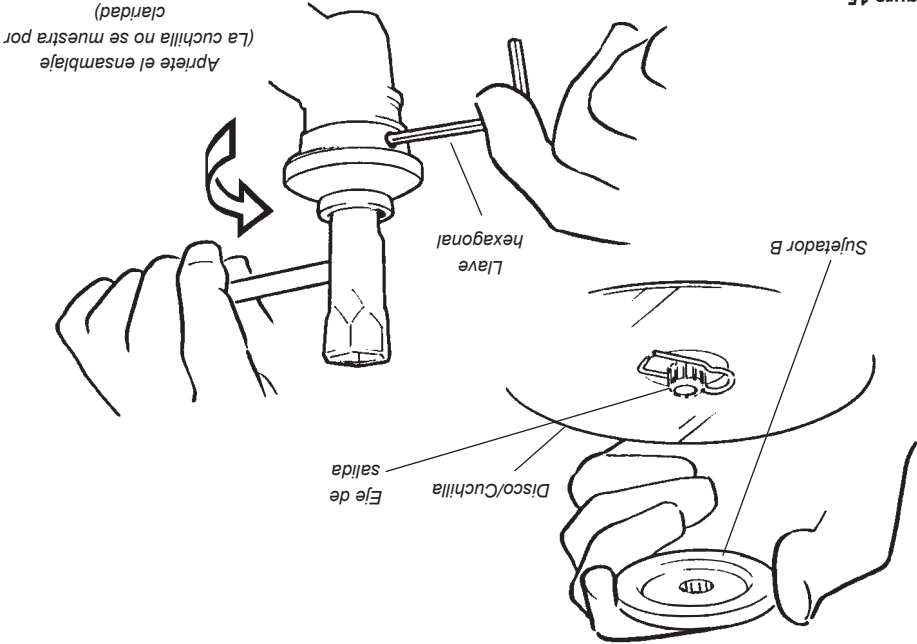


Figura 12

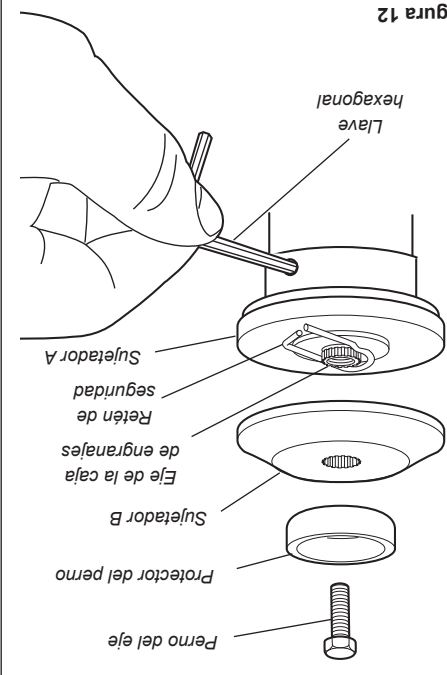


Figura 13


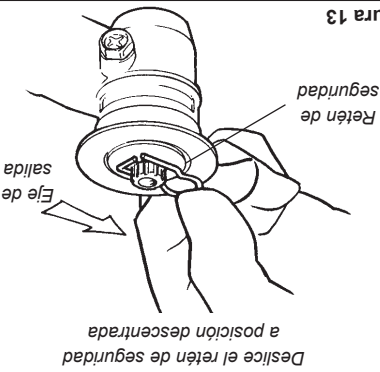


Figura 14

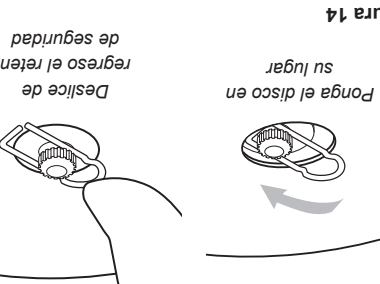

NOTA:



La C2510 es enviada con el Sujetador A, el retén de disco (el retén de seguridad), el Sujetador B, el perno de eje, y el protector de perno instalado. El perno de eje tiene una rosca izquierda. Gire hacia las agujas del reloj para retirarlo.

1. Con el eje de salida de la caja de engranajes cara arriba, gire el eje central y el sujetador A hasta que la muesca en el borde de la caja de engranajes, y luego asegure el sujetador a la caja de engranajes insertando el lado más largo de la llave hexagonal a través de ambas muescas. Consulte la figura 10.
2. Usando la llave combinación de buja/destornillador, retire el perno de eje y el protector de perno. Consulte la figura 10.

NOTA:

Asegúrese que el sujetador B es instalado en la caja de engranajes con la muesca ranurada encajada con el eje de la caja de engranajes.

3. Usando la llave hexagonal para asegurar el Sujetador A, instale y apriete con la mano el cabezal (para instalar, gire en dirección contraria a las agujas del reloj). Consulte la figura 11.
4. Retire la llave hexagonal de la caja de engranajes y del sujetador.

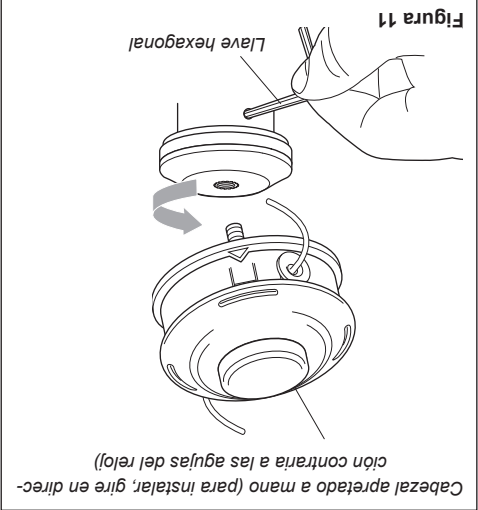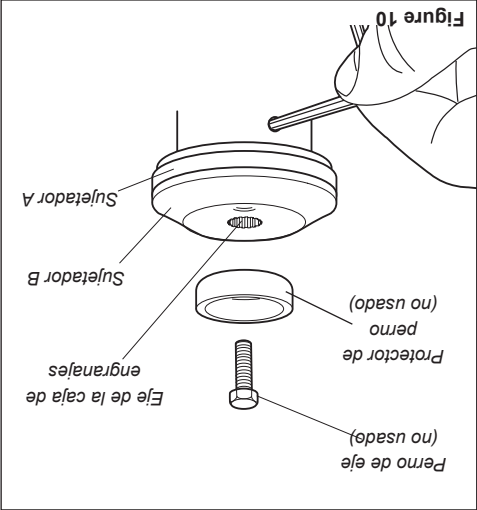

La C2510 debe estar ahora completamente ensamblada para ser operada como podadora o desmalezadora


Instale el mango tipo barra:

1. Use la llave hexagonal de 4mm para retirar los tornillos de retención de la abrazadera inferior del soporte del mango. Separe la tapa de la abrazadera, fíjese en la posición de los dos espacadores de 2" a instalarse entre la abrazadera. Posicione el mango sobre el tubo exterior de la calcomanía de posición del mango. Vuelva a ensamblar la abrazadera inferior al soporte del mango en orden reverso al desmontaje. Consulte la figura 5.
3. Posicione el mango en una forma conveniente para el operador.
4. Apriete firmemente ambos tornillos de retención de la tapa inferior.
5. Ajusta el cable al tubo exterior con las bandas que vienen en el kit de herramientas. Consulte la figura 5.

Ajustes

Ajuste la holgura del acelerador



La holgura del gatillo debe ser aproximadamente de 3/16-1/4 pulgadas (4.6 mm). Consulte la figura 6. Cerciórese que el gatillo de aceleración opere suavemente sin trabarse. Si es necesario ajustar la holgura, siga los procedimientos e ilustraciones a continuación.

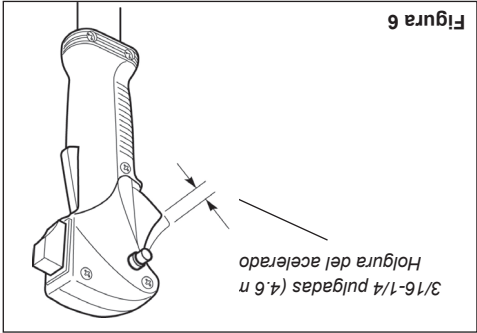

1. Extraiga la cubierta del limpiador de aire alojando los dos tornillos de mano. Consulte la figura 7.
2. Aloje la tuerca de seguridad en el cable ajustador. Consulte la figura 8.




3. Gire el cable ajustador hacia dentro o fuera como sea requerido para obtener la holgura apropiada 3/16-1/4 pulgadas (4.6 mm). Consulte la figura 8.
4. Apriete las tuercas de seguridad.
5. Reinstale la tapa del filtro de aire.

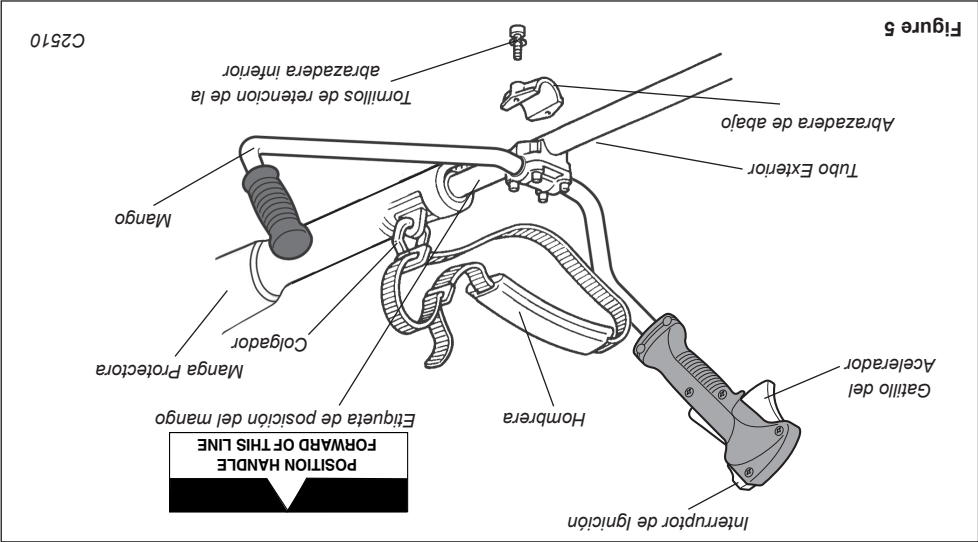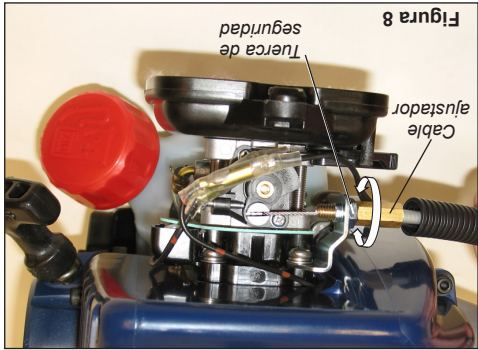

Ensamblaje

Protector del accesorio de corte

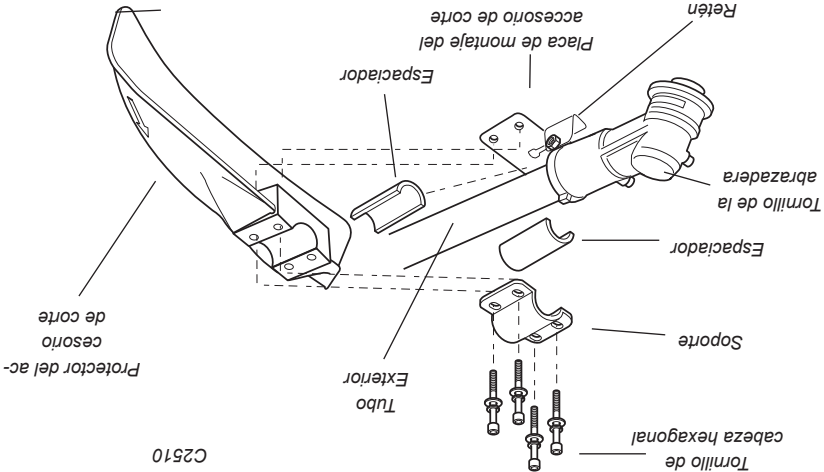

C2510

Figura 9

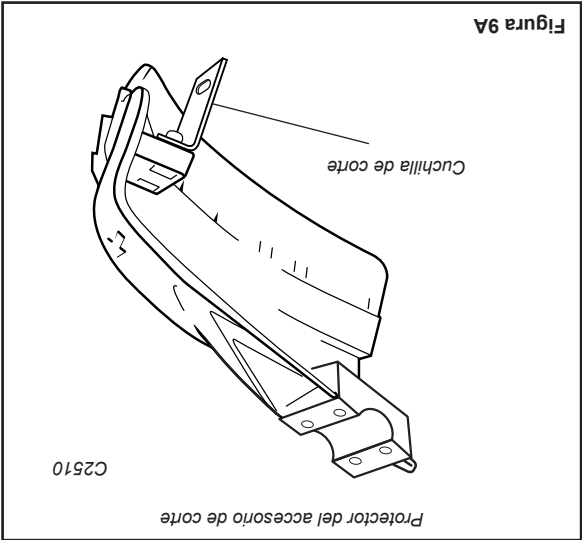


Figura 9A

Instale el protector del accesorio de corte C2510.

1. Inserte el protector del accesorio de corte entre el tubo exterior y la placa de montaje. Consulte la figura 9.

NOTA:

Pueda que sea necesario alinear el retén y el tornillo sujetador para ajustar la placa de montaje del protector del accesorio de corte.

2. Coloque los dos espaciadores y el soporte sobre el tubo exterior e instale sin ajustar los cuatro tornillos de cabeza allen. Consulte la figura 9.

3. Apriete los cuatro tornillos de cabeza allen para asegurar el protector del accesorio de corte.

!PRECAUCIÓN!

Asegurese de que el tornillo sujetador y el retén estén debidamente apretados antes de apretar los cuatro tornillos de cabeza allen.

!ADVERTENCIA!

JAMAS utilice esta maquina sin el protector secundario cuando el cabezal de corte esté en uso.

Protector Secundario C2510.

(cuando el cabezal está en uso)


1. Una la extensión del protector al protector del implemento de corte.

!ADVERTENCIA!

NUNCA opere la unidad sin el protector del accesorio de corte instalado y asegurado firmemente.

!PRECAUCIÓN!

Asegurase que el protector secundario este completamente enganchado con el receptor del gancho.

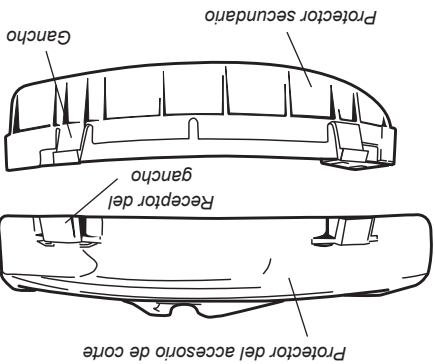

Desmalezadora C2510

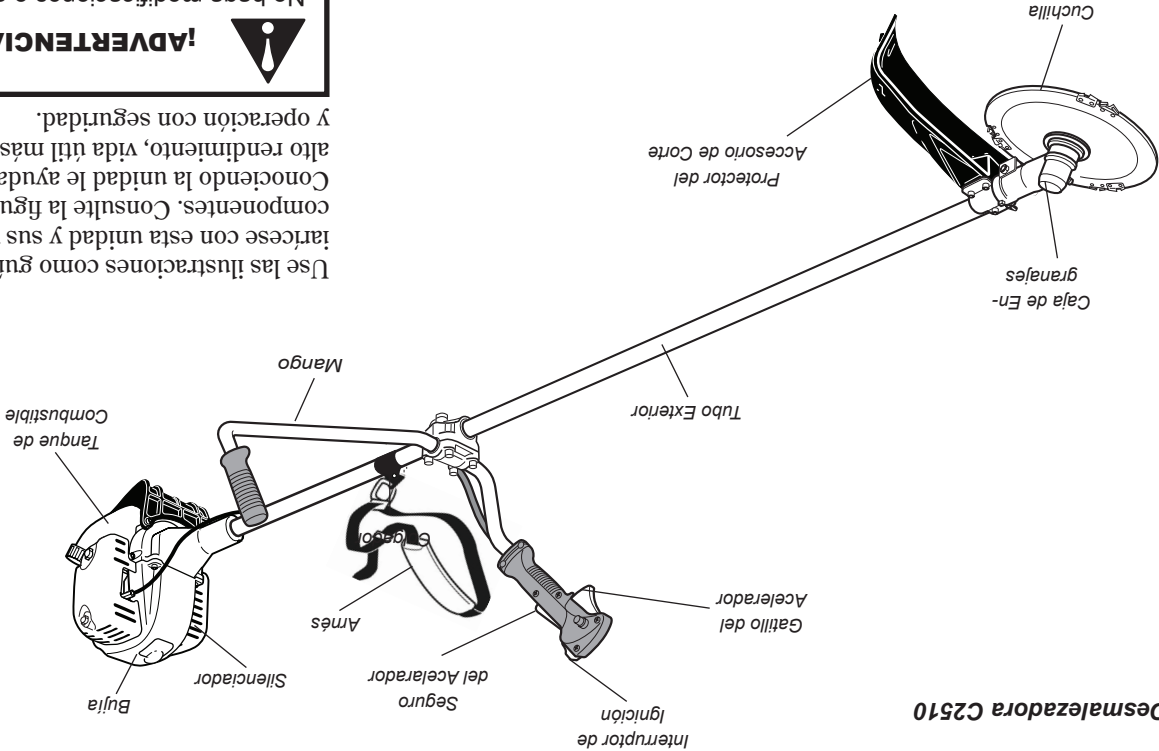


Figura 4

Especificaciones C2510

C2510X Peso sin Combustible (sin accesorios)	11.5 libras/5.2 kg
Modelo de Motor	SF2510E
Tipo de Motor	con recámara de impulso
Díámetro x Carrera	1.3 x 1.1 in./34 mm x 27 mm
Cilindrada	1.5 pulg. Cúbicas/24cc
Potencia Máxima	1.8 HP/0.8 kW @7500 rpm (min-1)
Combustible/Acete	50:1 con ISO-L-EGD o JASO FC aceite de mezcla de motor 2 tiempos
Tipo de Carburador	Walbro WYL, tipo diafragma
Capacidad del Tanque de Combustible	20.3 onzas/600 ml
Sistema de Encendido	El un-pieza electrónica, el programma controlado

Especificaciones sujetas a cambios sin previo aviso.

Esta unidad viene completamente ensamblada con la excepción del mango accesorio de corte y el protector del accesorio de corte.

Antes de Ensamblar

Antes de ensamblar, cerciórese de que tenga todos los componentes necesarios para armar una máquina completa e inspeccione la unidad y componentes en busca de daños.

- Motor/Tubo de montaje de la parte exterior.
- Accesorio de corte
- Kit conteniendo el soporte y utensilios de metal para montar el protector del accesorio de corte, este manual del propietario/operador y juego de herramientas para mantenimiento rutinario. Los kits de herramientas varían por modelo y pueden incluir una llave hexagonal, llave bujía y destornillador, y una llave inglesa.

¡IMPORTANTE!

Los términos “izquierda”, “mano izquierda”, y “LH”, “derecha”, “mano derecha”, y “RH”, “delantera” y “trasera”, indican direcciones desde el punto de vista del operador durante la operación normal de este producto.

Periodo de Cumplimiento con Regulaciones de Emisiones EPA* Categoría A

* Cumple o excede estas especificaciones y es recomendada para todo los productos de Shindaiwa.

** El cumplimiento de emisiones EPA referido en la etiqueta en el motor, indica el número de horas de operación por la cual el motor ha demostrado cumplir con los requisitos federales de emisiones. Categoría C = 50 horas (Modificado), B= 125 horas (Intermedio) y A = 300 horas (Extendido).

BujíaNGK CMR6H

Filtro de Aire..... Elemento no reversible de uso pesado.

Metodo de Arranque Regular

Metodo de Parada..... Interruptor

Tipo de TransmisiónAutomática, embrague centrífugo con engranajes helicoidales

¡ADVERTENCIA!

No haga modificaciones o alteraciones no autorizadas a ninguna de estas máquinas ni a sus componentes.

Use las ilustraciones como guía, familiarícese con esta unidad y sus varios componentes. Consulte la figura 4. Conociendo la unidad le ayudará a obtener alto rendimiento, vida útil más prolongada y operación con seguridad.

Esté Alerta del Área de Trabajo


Figura 2

Evite trabajar durante largo tiempo bajo temperaturas muy calientes o muy frías.

Tenga mucho cuidado al trabajar sobre terrenos resbalosos, especialmente en tiempo de lluvia.

Si hace contacto con un objeto sólido, detenga el motor e inspeccione el accesorio de corte en busca de daños.

Esté constantemente alerta de los objetos y despojos que puedan ser lanzados por el accesorio de corte o rebotados.

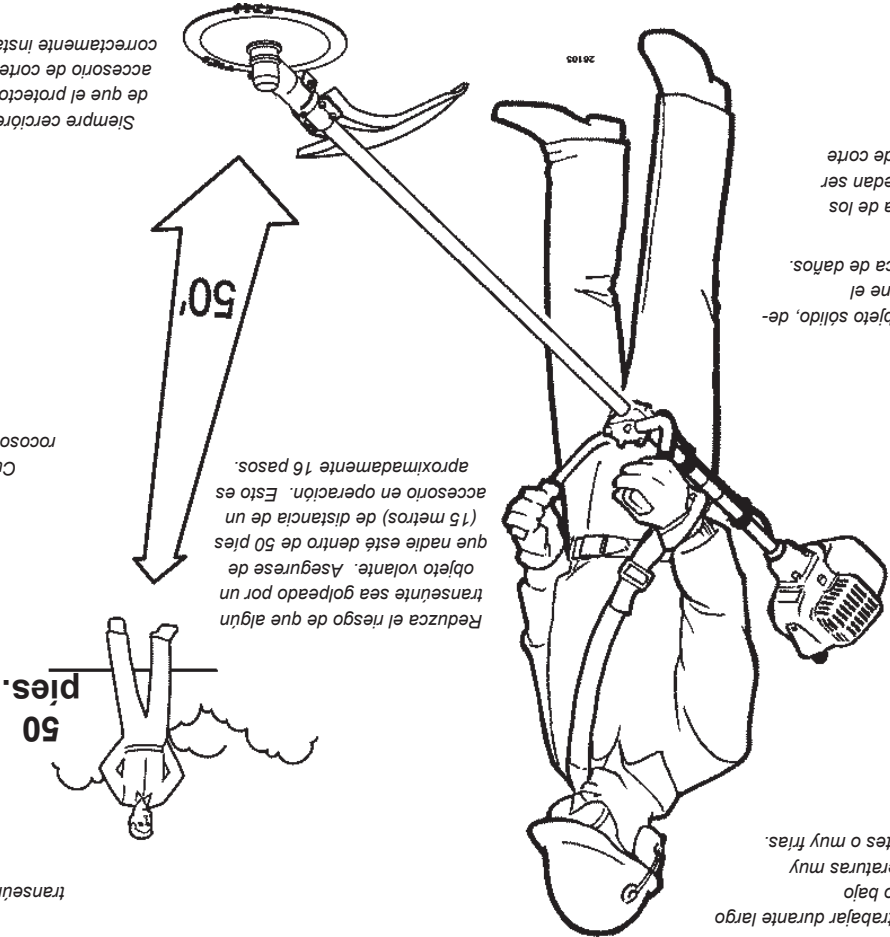

Reduzca el riesgo de que algún transeúnte sea golpeado por un objeto volante. Asegurese de que nadie esté dentro de 50 pies (15 metros) de distancia de un accesorio en operación. Esto es aproximadamente 16 pasos.

50
pies.


Cuando trabaje en un terreno rocoso o cerca de cables o cercas eléctricas, use extremo cuidado y evite tocarlos con el accesorio de corte.

Cerciórese de que los transeúntes u observadores estén fuera de la "zona de peligro" de 50 pies usen protección de ojos.

Siempre cerciórese de que el protector del accesorio de corte esté correctamente instalado.

Etiquetas de Seguridad

Figura 3

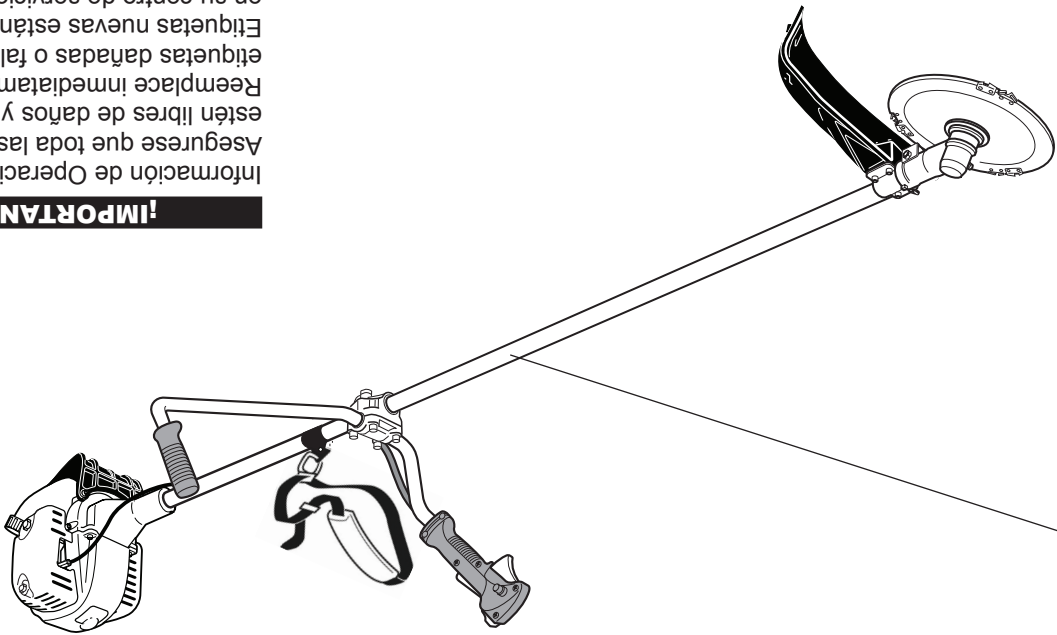

C2510

¡IMPORTANTE!

Información de Operación:
Asegúrese que toda las etiquetas estén libres de daños y legibles. Reemplace inmediatamente etiquetas dañadas o faltantes. Etiquetas nuevas están disponibles en su centro de servicio local autorizado de Shindaiwa.



Use Buen Juicio

SIEMPRE use protección para los ojos como escudo contra objetos lanzados.

NUNCA opere el motor cuando transporte la unidad.

NUNCA opere la unidad en el

interior! Cerciórese que siempre

haya buena ventilación. El humo o

gases del escape del motor pueden

causar serias lesiones o la muerte.

SIEMPRE mantenga su área de

trabajo libre de basura u objetos

que pueden rebotar contra usted o

contra transeúntes.

SIEMPRE use el accesorio de

corte apropiado.

SIEMPRE pare el motor

inmediatamente si repentinamente

empieza a vibrar. Inspeccione

el accesorio de corte por partes

quebradas, faltantes o instaladas

incorrectamente.

NUNCA extienda el cable de nylon

más allá de lo especificado para

su máquina.

SIEMPRE mantenga la máquina lo

más limpia posible. Manténgala libre

de vegetación, barro, etc.

SIEMPRE sujete la máquina

firmemente con ambas manos

cuando corte o recorte, y mantenga

el control en todo momento.

SIEMPRE mantenga los

mangos limpios.

SIEMPRE desconecte el cable de

bujía antes de hacer mantenimiento

a la máquina.

SIEMPRE, si el disco/cuchilla se


enreda en un corte, apague el motor

inmediatamente. Saque la rama o

árbol para liberar el disco/cuchilla.

Siempre use un arnés cuando opere una unidad equipada con disco/cuchilla.

Figura 1

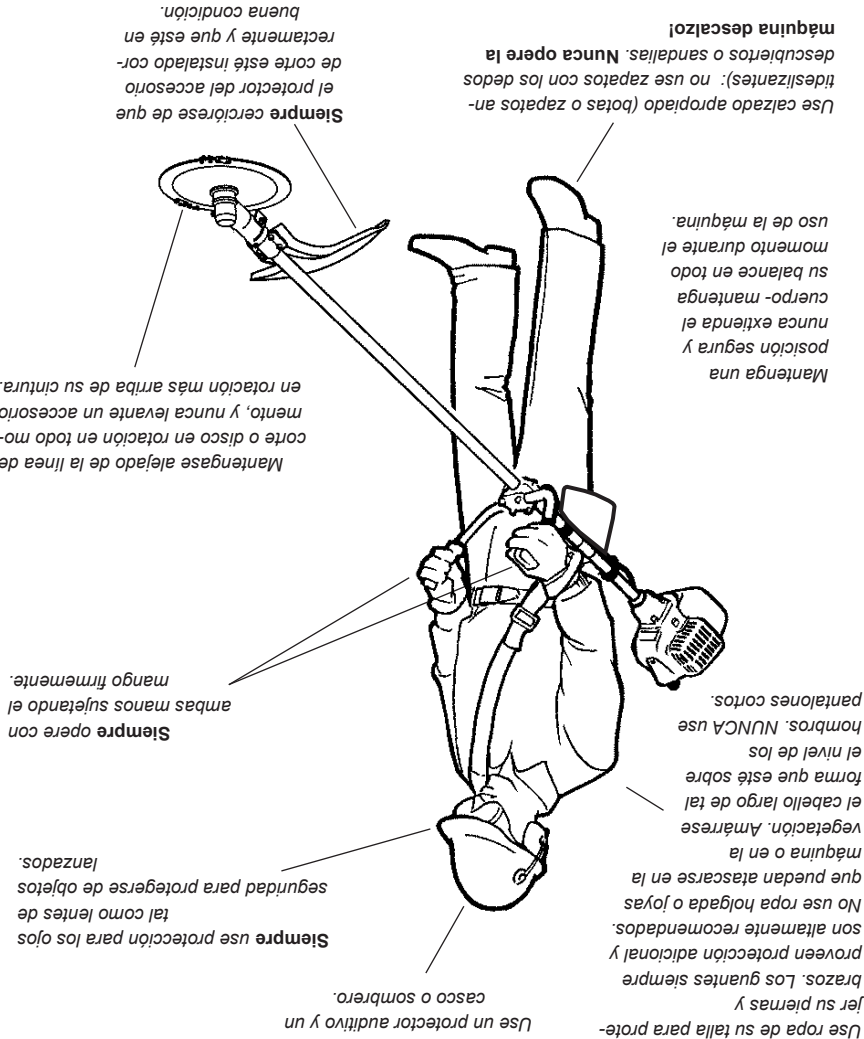

Introducción


La desmaltzadora Shindaiwa Serie 2510 ha sido diseñada y construida para suministrar un rendimiento superior sin comprometer calidad, comodidad ni durabilidad.

Los motores Shindaiwa representan la tecnología líder de motores de alto rendimiento, de poco peso y pequeña cilindrada con excepcional alta potencia. Como propietario/operario, usted no tardara en comprobar que Shindaiwa es la única máquina en esta clase!

¡IMPORTANTE!

La información contenida en este manual describe unidades disponibles a la fecha de su publicación.

Shindaiwa Inc. se reserva el derecho de realizar cambios a sus productos sin previo aviso, y sin la obligación de hacer modificaciones a máquinas fabricadas previamente.



¡ADVERTENCIA!


Las emisiones emitidas por el tubo de escape de este producto contienen sustancias químicas que en el estado de California son consideradas como causantes de cáncer, defectos congénitos u otros efectos nocivos a la reproducción humana.

Contenido

Declaraciones de seguridad.....2	Página
Información de seguridad.....2	
Etiquetas de seguridad.....4	
Descripción del producto.....5	
Especificaciones.....5	
Ensamblaje.....6	
Ajustes.....7	
Combustible.....10	
Arranque del motor.....10	
Parada del motor.....11	
Ajuste de marcha mínima.....11	
Verificación de la condición de la unidad.....12	
Correa de arnés.....12	
Corte de césped con cabezal.....12	
Usando un disco.....13	
Mantenimiento.....14	
Afilado de Discos.....17	
Almacenamiento de largo plazo.....17	
Guía diagnóstico.....18	
Garantía del sistema de emisiones.....20	

Declaraciones De Seguridad

A través de este manual se encuentran “declaraciones de seguridad” especiales.



¡ADVERTENCIA!

Toda información precedida por un símbolo triangular de advertencia y la palabra ADVERTENCIA! contiene información o procedimientos que se deben cumplir para evitar lesiones.

¡PRECAUCIÓN!


Toda información precedida por la palabra PRECAUCIÓN! contiene información que se debe cumplir para evitar daños mecánicos.

¡IMPORTANTE!


Toda información precedida por la palabra “IMPORTANTE” contiene información especial y significativa.

NOTA:


Toda información precedida por la palabra “NOTA” contiene información útil que puede hacer su trabajo más fácil.




Lea y siga las recomendaciones de este manual del operario. De no hacerlo podría resultar en lesiones graves.



 
Use protección para los ojos y protección para los oídos en todo momento que este operando esta máquina.




Mantenga a los transeúntes a una distancia mínima de 15 metros (50 pies) mientras la máquina este en operación.




Manténgase alerta por objetos lanzados o rebotes.



No opere esta unidad con un disco/cuchilla si menos que este equipada con un mango aprobado por Shindaiwa.



Siempre use un arnés cuando opere esta unidad con disco/cuchilla. Un arnés también es recomendado cuando use cable de nylon.



Si esta unidad se usa como una desmaltzadora, manténgase alerta por los rebotes del disco. Un disco atascado puede causar movimientos repentinos y la máquina.


¡IMPORTANTE!

El propósito de los procedimientos operacionales descritos en este manual es ayudarle a obtener el más alto rendimiento de su máquina y proteger a usted y a otras personas de sufrir lesiones. Estos procedimientos son pautas operativas para una operación segura bajo la mayoría de condiciones y no tienen el propósito de substituir las normas y/o leyes vigentes en su área. Si tiene alguna pregunta relacionada con su desmaltzadora Shindaiwa Serie 2510 o si no entiende alguna información contenida en este manual, consulte a su distribuidor Shindaiwa, quien le atenderá con gusto. También puede comunicarse con Shindaiwa Inc. a la dirección que aparece en la contra portada de este manual.

Instrucciones de Seguridad

Trabaje con cuidado

Podadoras Shindaiwa operan a velocidades altas y pueden causar daños o lesiones serias si son mal usadas o abusadas. Nunca permita que una persona sin entrenamiento o instrucción opere esta unidad!




¡ADVERTENCIA!

Nunca instale accesorios no autorizados. No use accesorios no aprobados por Shindaiwa en esta unidad.

Manténgase Alerta

Usted debe estar en optimas condiciones física y mental para operar esta máquina en forma segura.




¡ADVERTENCIA!

Nunca opere ninguna máquina motorizada si está cansado o si está bajo la influencia de alcohol, drogas o medicamentos o cualquier otra sustancia que pueda afectar su habilidad y juicio.

Disminuya el riesgo de sufrir lesiones o causar lesiones a otros! Lea este manual y familiarícese con su contenido. Siempre use protección para los ojos y oídos cuando opere esta máquina.

!ADVERTENCIA!

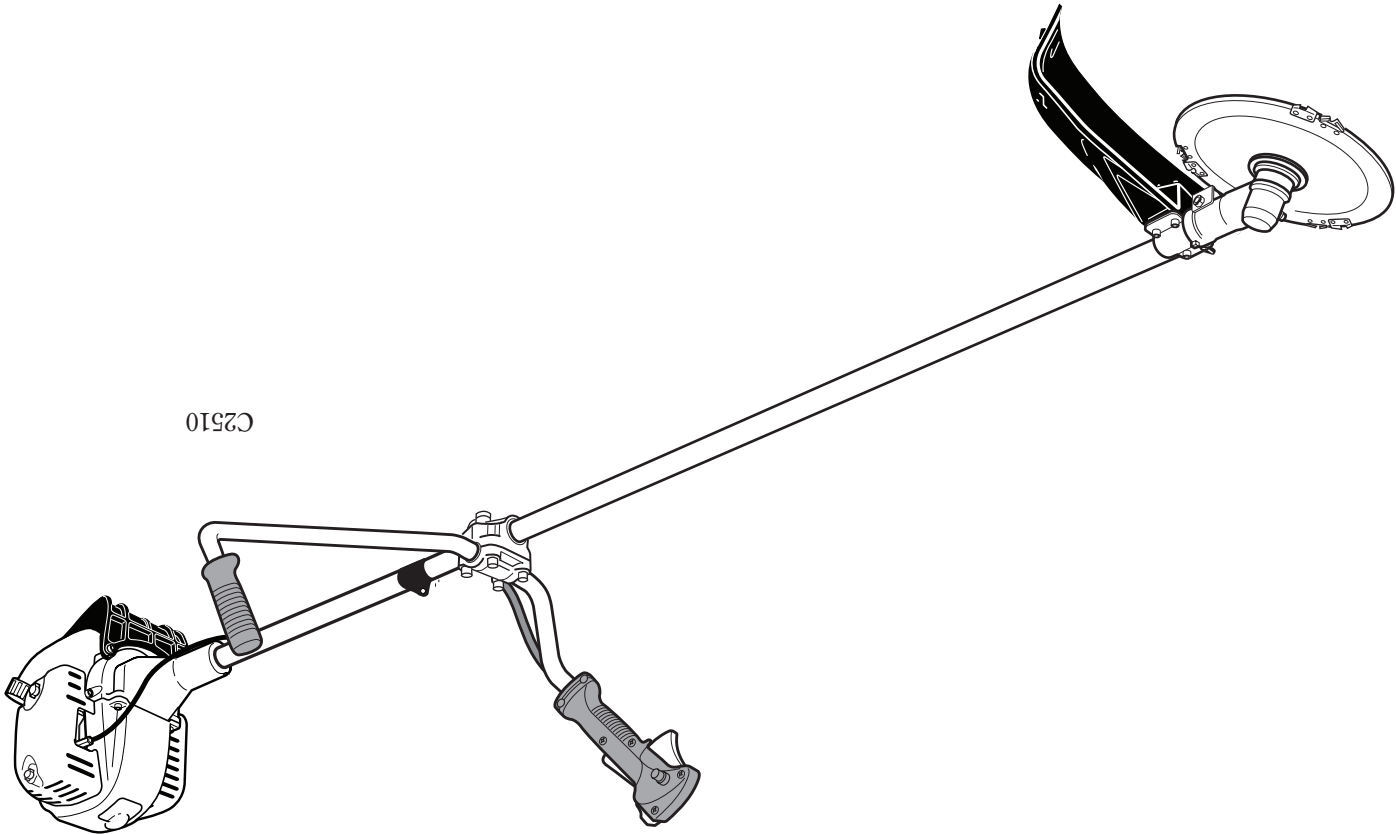

C2510

Desmalezadora C2510

MANUAL DEL PROPIETARIO/OPERADOR SHINDAIWA
